## User manual for QR Code label

All our IPC or NVR will have 2 labels, label 1 is general info for IPC or NVR, like model, system, lens etc. Label 2 is QR code label for remote view on mobile, IE or CMS.

All our IPC or NVR have Cloud P2P service, it has an unique Serial ID for user to log in their device anytime, anywhere. Don't need do port forwarding. Buyer can find serial ID in the CMS software(VERSION), and after connect their device with internet(Nat status-CONNECTED). They can remote view via Serial ID on Mobile, IE or CMS.

For convenient reason, We make a QR code label with Serial ID and website, and put on IPC or NVR body. Thus buyer don't need log in CMS software to get ID every time. Our QR code label includes 1x QR code and 1x ID and 1x website. If you scan the QR code, you will find that content inside is the ID and website.

Please see details as below;



1, If you want to remote view on Mobile via APP- Vmeyecloud or Xmeye.You can add device by Scan the QR code. Or copy ID manually.

12D	设备设置	确定
设备别名:	IPC	
连接方式	P2P Cloud 🗸	
设备序列号:	1,Copy ID manually	
用户名:	admin 2, or you can Se	can QR ID
密码:	label and get Se need copy mar	erial ID, no nually
通道总数	1	
NAT->云方式:	✓	
APP for M	Inble-Vineyediaud or Ximeye	

2, If you want to remote view on website <u>www.p2pipc.net</u>, You just choose Log in by device and then copy ID from label.

← ○ う - ∮ http://www.     ★ 收譲 * □快递查询 □ 老客户     へ □ Login × +	>> 文件 查看 收藏 工具 報助 合 — ə × dvroenter.net/locale.do?method=goLocale8language=en&cour ④ ② ☆ ▼ 1 输入文字提索 Q ❹ 同 □ 常 >> 器扩展 ● 通发送到手机 函数图 灣常用工具 戶账号助手 ♡电脑管家上网防护 回搜狗抢票3.0 ご 摆狗;
SDVR CL	DUD ACCESS REMOTE LOGIN SYSTEM
Android App	By User By Device Login And Preview Id QR code to login Verify IS965
	Login Enter Guide Please Click "Enter Guide" if you visit first Register Download Get Password

3, If you want to remote view in CMS software, You just Choose CLOUD when add the device, and then Copy ID from label and add the device.

E	dit	_	_			×
	NO.	IP Address	Port	MAC	Vendor	
		ID Search	1	dd Device	EditDevice	
	Device	Name Test			LUILDEVICE	
	LoginTy	pe 🗖 IP Ad	ddress 🗖 Do	omain 🗖 AR	SP 🔽 Cloud	
	Serial II	с Сору	Serial ID be	elow QR code		
					Choose clo	ud
	User Na	ame admin		Password	<u></u>	
	Zone	1				
	Vendor	H264DV	'R	-		
			ОК	Cancel		