



**JetNet 3705-24V**

**5-port Industrial Fast Ethernet PoE Switch**

**User Manual**

Revision V1.0

## **FCC Warning**

This Equipment has been tested and found to comply with the limits for a Class-A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **CE Mark Warning**

This is a Class-A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.



## Content

---

<b>Introduction</b> .....	<b>1</b>
Features.....	1
Package Contents.....	2
<b>Hardware Description</b> .....	<b>3</b>
Physical Dimension.....	3
Front Panel.....	4
Top View.....	4
LED Indicators.....	5
Ports.....	6
Cabling.....	7
Wiring the Power Inputs .....	8
Wiring the Fault Alarm Contact.....	9
<b>Mounting Installation</b> .....	<b>10</b>
DIN-Rail Mounting.....	10
Wall Mounting.....	11
<b>Hardware Installation</b> .....	<b>13</b>
Installation Steps .....	13
<b>Network Application</b> .....	<b>14</b>
<b>Troubleshooting</b> .....	<b>15</b>
<b>Technical Specification</b> .....	<b>16</b>

# Introduction

---

The JetNet 3705-24V Industrial Switch is 5-port Fast Ethernet switch with 4 IEEE-802.3af PoE injectors with one DC booster for transportation PoE application. The internal DC booster can boost Dc power from 24V to 48V to compliance with IEEE 802.3af Power over Ethernet standard. It offers 60 watts power budget to satisfy 4 ports 15.4w power consumption. With the rugged Aluminum alloy housing, the JetNet 3705-24V survived under -25°C ~ 60°C environment temperature give your Power over Ethernet application best reliability.

## Features

- System Interface/Performance
  - RJ-45 ports support Auto MDI/MDI-X Function
  - Embedded 4-port PoE Injection
  - Store-and-Forward Switching Architecture
  - Back-plane (Switching Fabric): 1.0Gbps
  - 2K MAC Address Table
- Power Input
  - DC 24V~48V Redundant Power Input
- Operating Temperature
  - Standard: -25°C ~ 60°C
- Case/Installation
  - IP-30 Protection
  - Installation in a Pollution Degree 2 environment
  - DIN Rail and Wall Mount Design

## Package Contents

Please refer to the package contents list below to verify them against the checklist.

- JetNet 3705-24V
- User manual
- Removable Terminal Block- installed on the device
- Wall-mount Kit (2 wall-mount bracket with screws)

Compare the contents of the industrial switch with the standard checklist above. If any item is damaged or missing, please contact the local dealer for service.


# Hardware Description

In this paragraph, the Industrial switch's hardware specs, ports, cabling information, and wiring installation will be described.

## Physical Dimension


JetNet 3705-24V dimensions (W x D x H) is 48.6mm x 95mm x 140mm, the detail dimensions as **Figure-1**

**Figure-1: Mechanical Dimension**

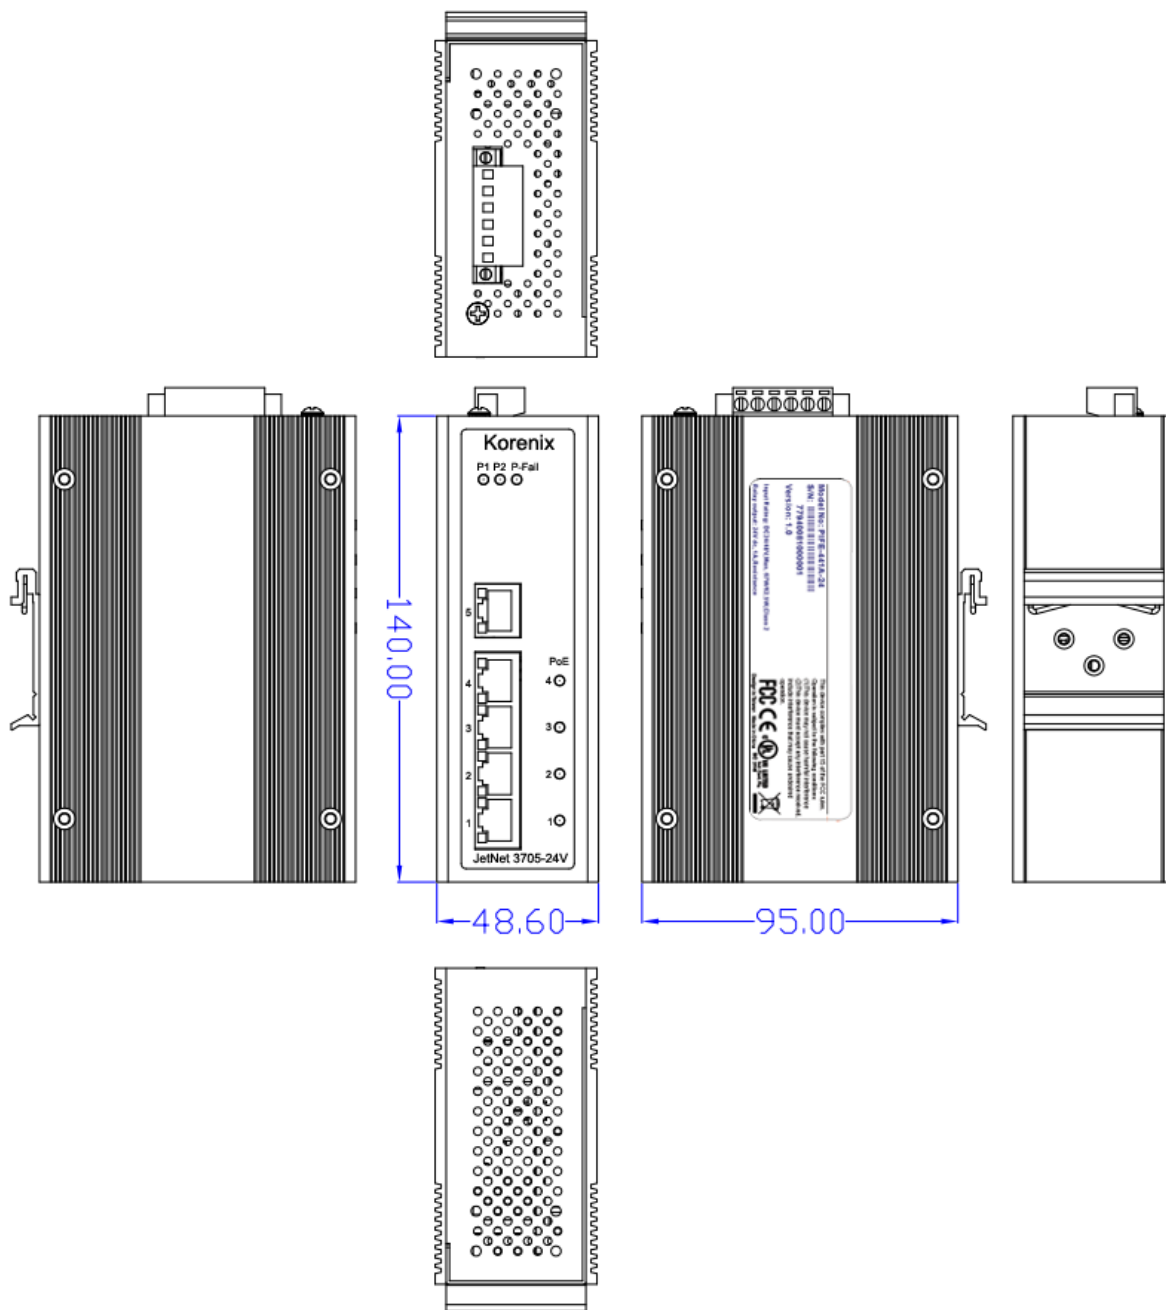

## Front Panel


The Front Panel of the JetNet 3705-24V is shown below **Figure-2**

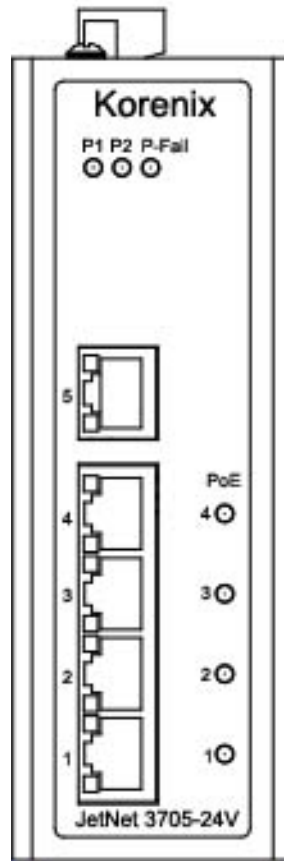

**Figure-2: Front Panel of the PoE Injectors Industrial Switch**

## Top View



The top view of the JetNet 3705-24V has one terminal block connector of two DC power inputs and Relay circuit contact. Please refer to **Figure-3** for further information.

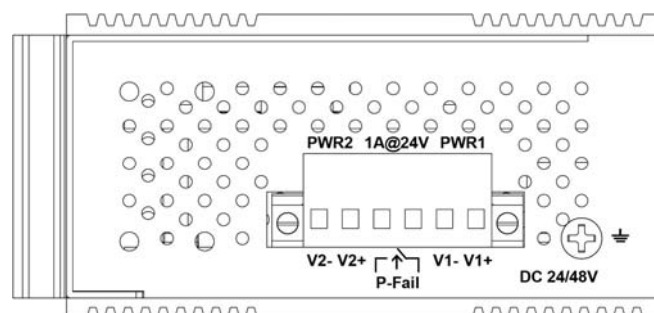

**Figure-3: Top View of the JetNet 3705-24 Industrial Switch**

## LED Indicators

The diagnostic LEDs located on the front panel of the industrial switch provide real-time information of system and operation status. **Table-1** provides the description of the LEDs status and their definitions for the switch.

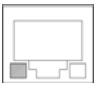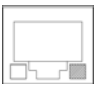LED	Color	Description	
<b>P1</b>	<b>Green</b>	On	Power input 1 is active
		Off	Power input 1 is inactive
<b>P2</b>	<b>Green</b>	On	Power input 2 is active
		Off	Power input 2 is inactive
<b>P-Fail</b>	<b>Red</b>	On	Power input 1 or 2 has failed
		Off	Power input 1 and 2 are both functional, or no power inputs
<b>PoE indicator (Port 1 ~ 4)</b>	<b>Green</b>	On	The port is supplying power to the powered-device
		Off	No powered-device attached or power supplying fails
<b>LAN Port 1 ~ 5 (RJ-45)</b>	<b>Green</b> 	On	Connected to network
		Flashing	Networking is active
		Off	Not connected to network
	<b>Amber</b> 	On	Full-duplex link
		Flashing	Collision occurs
		Off	Half-duplex link or link down

**Table-1: LED Indication Definition**



# Ports

## ■ RJ-45 ports

The Fast Ethernet ports (RJ-45) will auto-sense for 10Base-T or 100Base-TX connections. Auto MDI/MDI-X means that the switch can connect to another switch or workstation without changing straight-through or crossover cabling. Please refer to **Table-2** for RJ-45 pin assignment.

Pin Number	Assignment
1	Tx+
2	Tx-
3	Rx+
6	Rx-

**Table-2: RJ-45 Pin Assignment**

**Note** “+” and “-” signs represent the polarity of the wires that make up each wire pair.

All ports on this industrial switch supports automatic MDI/MDI-X operation, users can use straight-through cables (See figures below) for all network connections to PCs or Servers, or to other switches/hubs. In straight-through cable, pins 1, 2, 3, and 6, at one end of the cable, are connected straight through to pins 1, 2, 3 and 6 at the other end of the cable. **Table-3** shows the 10BASE-T/100BASE-TX MDI and MDI-X port pin-outs.

Pin	MDI-X Signal	MDI Signal
1	Receive Data plus (RD+)	Transmit Data plus (TD+)
2	Receive Data minus (RD-)	Transmit Data minus (TD-)
3	Transmit Data plus (TD+)	Receive Data plus (RD+)
6	Transmit Data minus (TD-)	Receive Data minus (RD-)

**Table-3: MDI/MDI-X Port Pin-outs**

The following figures show the cable schematic for straight-through type (**Figure-4**) and crossover type (**Figure-5**).

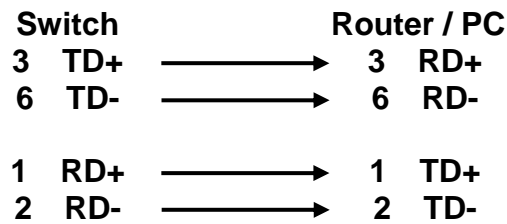


Figure-4: Straight Through Cable Schematic

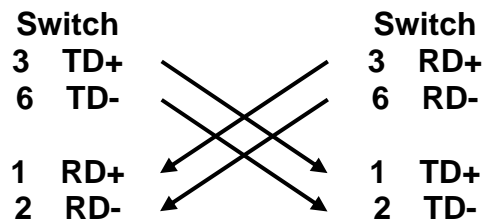


Figure-5: Crossover Cable Schematic

## Cabling

- Twisted-pair segments can be connected with unshielded twisted pair (UTP) or shielded twisted pair (STP) cable. The cable must comply with the IEEE 802.3u 100Base TX standard (e.g. **CAT.5**, **CAT.5e**, or **CAT.6**). The cable between the equipment and the link partner (switch, hub, workstation, etc.) must be less than 100 meters (328 ft.) long.

## Wiring the Power Inputs

Please follow the steps below to wire the power cord which from the other compliant external DC power supplier.

1. Insert the positive and negative wires into the **PWR1 (V1+, V1-)** and **PWR2 (V2+, V1-)** contacts on the terminal block connector as shown in **Figure-6**.

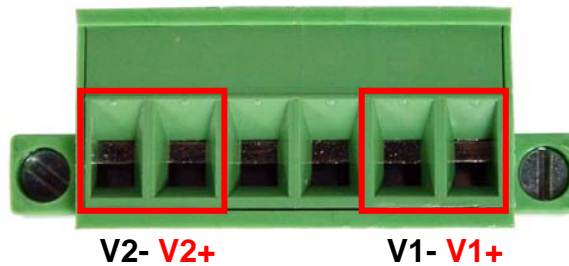


Figure-6: Terminal Block Front View for Power1 & Power2 Contact

2. Tighten the wire-clamp screws which as shown in the **Figure-7** for preventing the wires from loosing.

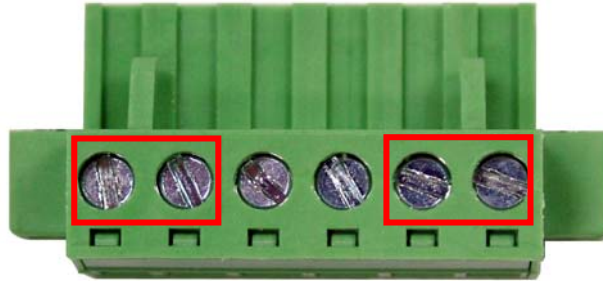


Figure-7: Terminal Block Top View

- Note**
- Use Copper Conductors Only, **60/75°C**, Tighten to **5 lb in**
  - The wire gauge for the terminal block should be in the range between **12~ 24 AWG**.
  - **Using UL certified AC/DC switching power as power source. The output power should not less than 70W.**

## Wiring the Fault Alarm Contact

The fault alarm contact is in the middle of terminal block connector as the picture shows below. Inserting the wires, will detect the fault status including power failure or *port link failure (managed industrial switch only)* and from a **Normally Close** circuit. Please refer to **Figure-8** for the fault alarm contact, and **Figure-9** shows the application example for the fault alarm operation.

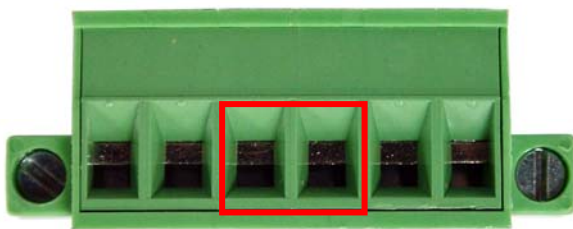


Figure-8:

Terminal Block Front View for Fault Alarm Contact

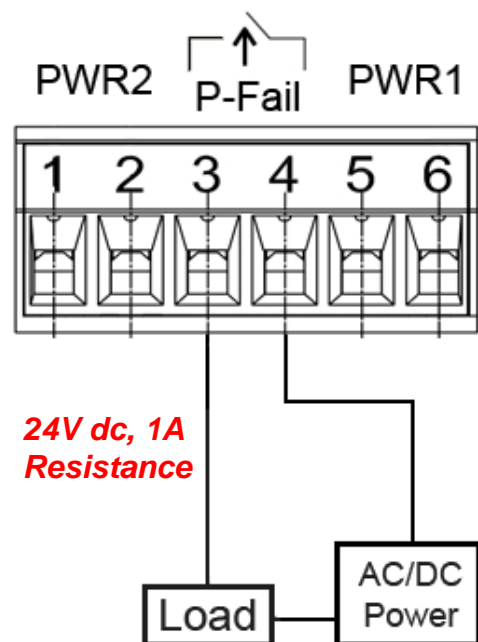


Figure-9:

Fault Alarm Application Example


- Note**
- Use Copper Conductors Only, **60/75°C**, Tighten to **5 lb in**
  - The wire gauge for the terminal block should be in the range between **12~ 24 AWG**.
  - Recommend using UL certified AC/DC power supply as the load power source and power consumption not less than 24W.

# Mounting Installation

---

## DIN-Rail Mounting

The DIN-Rail bracket is screwed on the switch on the production line in the factory. If the bracket is not screwed on the switch, please refer to **Figure-10** to screw it on the switch. Follow the steps below to hang the industrial switch.

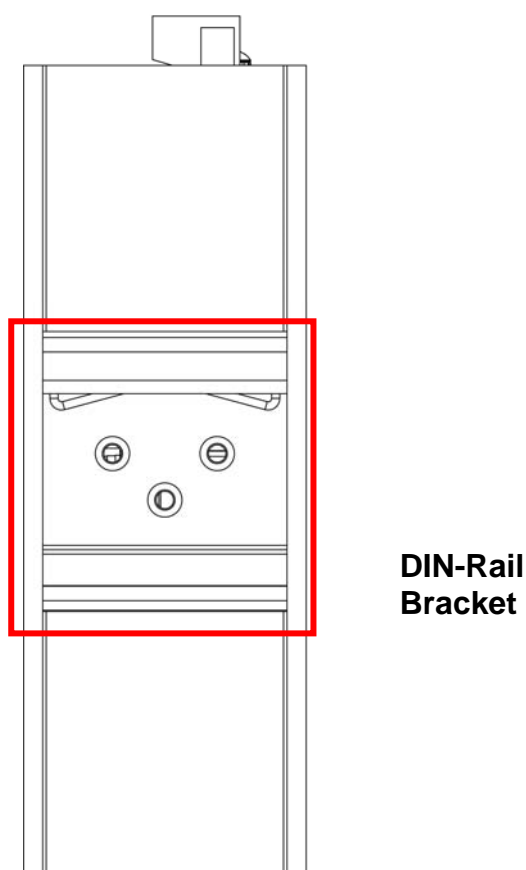

**Figure-10: Rear side of the PoE Injectors Industrial Switch**

1. Use the screws to screw the DIN-Rail bracket on the rear side of the industrial switch.
2. To remove the bracket, reverse the step 1.

3. After the DIN-Rail bracket is screwed on the rear side of the switch, insert the top of the bracket into the rail. Then, lightly pull-down the bracket into the rail. Be sure the DIN rail specification is compliance EN 50022 standard. (3.5cm DIN rail )

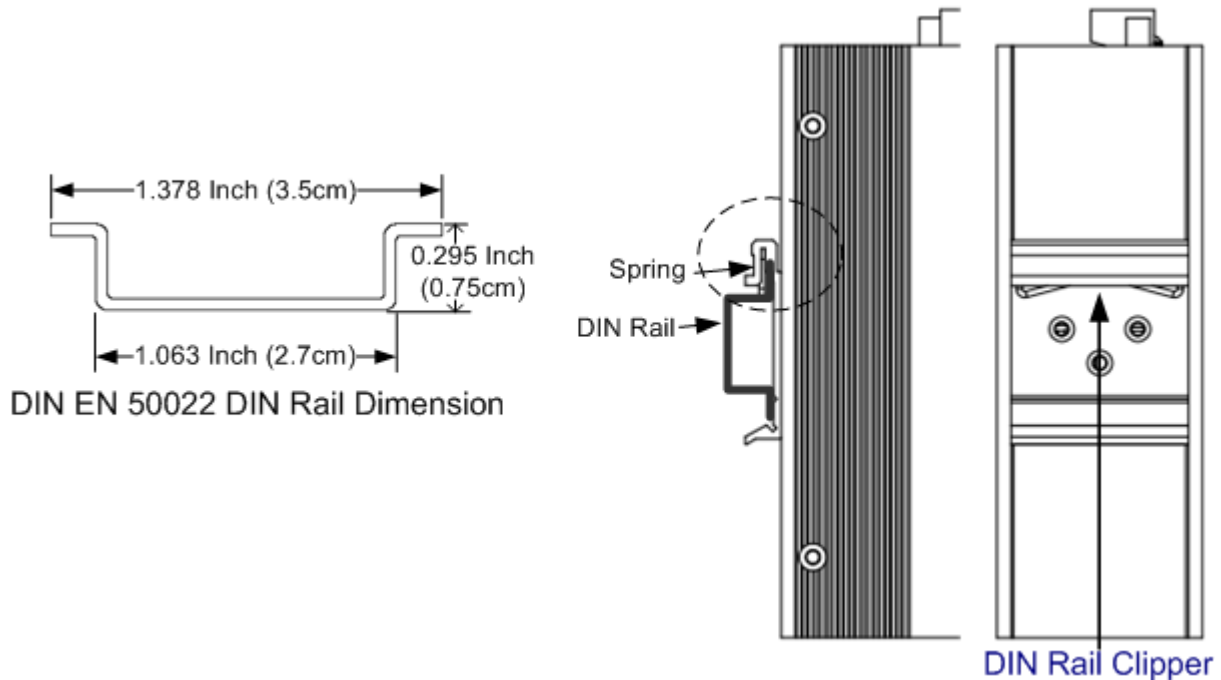



Figure-11

4. Check if the bracket is tightened on the rail or not.
5. To remove the switch from the rail, reverse steps above.


## Wall Mounting

Please refer to **Figure-12** and follow the steps below to mount the industrial switch with wall-mount bracket, and the detail dimension of the bracket as **Figure-13**.

1. Remove the DIN-Rail bracket from the switch; loose the screws to remove it.
2. Place the wall-mount bracket on the top side and bottom side of the switch.
3. Use the screws to screw the wall-mount bracket on the switch.
4. Use the hook holes at the corners of the wall-mount bracket to hang the industrial switch on the wall.
5. To remove the wall-mount bracket, reverse steps above.

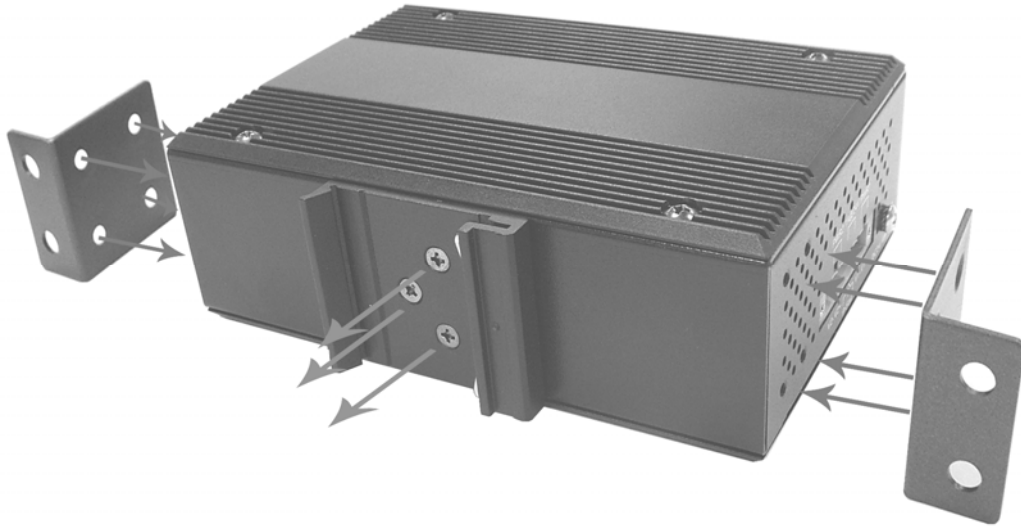

**Figure-12: Wall-Mount Bracket Installation**

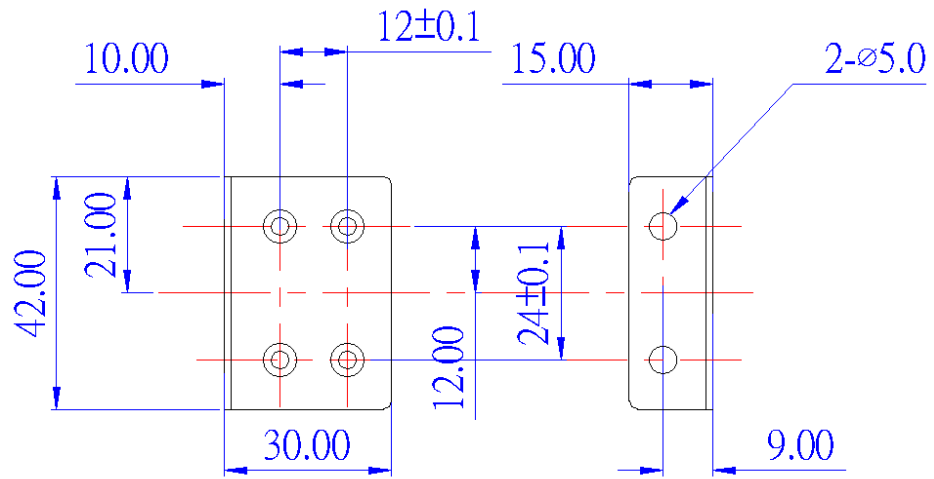

**Figure-13: Wall-Mount Bracket Dimension**

# Hardware Installation

---

In this paragraph, we are going to explain how to install the JetNet 3705-24V and the installation points to be attended to it.

## Installation Steps

1. Unpack the Industrial switch packing.
2. Check if the DIN-Rail bracket is screwed on the Industrial switch or not. If the bracket is not screwed on the Industrial switch, please refer to **DIN-Rail Mounting** section for DIN-Rail installation. If the user wants to mount the Industrial switch on the wall, then please refer to **Wall Mounting** section for wall mount plate installation.
3. To hang the Industrial switch on the DIN-Rail or wall, please refer to the **Mounting Installation** section.
4. Power on the Industrial switch. Please refer to the **Wiring the Power Inputs** section for knowing the information about how to wire the power cord. The power LED on the Industrial switch will light up. Please refer to the **LED Indicators** section for indication of LED lights.
5. Prepare the twisted-pair, straight through CAT.5/above cable for Ethernet connection.
6. Insert one side of the RJ-45 cable into the Industrial switch Ethernet port and another side to the network device's Ethernet port, e.g. Switch, PC or Server. The Ethernet port (RJ-45) LED on the Industrial switch will light up when the cable is connected with the network device. Please refer to the **LED Indicators** section for LED light indication.
7. When all connections are set and LED lights all show in normal, the installation is complete.



## Network Application

---

This segment provides the sample to help user have more actual idea of industrial switch application. For a sample application of the industrial switch, see the **Figure-14** below.



**Figure-14: Network Application**

# Troubleshooting

---

- Verify that you are using the right power cord/supplier/adapter (**DC 24V/48V**), please don't use the power supplier/adapter with a non-compliant DC output voltage, or it will burn the equipment.
- Select the proper UTP/STP cable to construct your network. Please check that you are using the right cable. Use unshielded twisted-pair (UTP) or shield twisted-pair (STP) cable for RJ-45 connections: 100 $\Omega$  Category 3, 4 or 5 cable for 10Mbps connections, 100 $\Omega$  Category 5 cable for 100Mbps connections, or 100 $\Omega$  Category 5e/above cable for 1000Mbps. Also be sure that the length of any twisted-pair connection does not exceed 100 meters (328 feet).
- **Diagnosing LED Indicators:** To assist in identifying problems, the Switch can be easily monitored through LED indicators on the front panel, which describe common problems the user may encounter and where the user can find possible solutions.
- If the power indicator does not light on when the power cord is plugged in, user may have a problem with the power cord. Then check for loose power connections, power losses or surges at power outlet. If you still cannot resolve the problem, contact the local dealer for assistance.
- If the Industrial switch LED indicators are normal and the connected cables are correct but the packets still cannot transmit. Please check your system's Ethernet devices' configuration or status.

# Technical Specification

---

The technical specifications of JetNet 3705-24V is shown as below.

<b>Standard</b>	IEEE 802.3 10Base-T Ethernet IEEE 802.3u 100Base-TX Fast Ethernet IEEE802.3x Flow Control and Back Pressure IEEE802.3af Power over Ethernet
<b>Protocol</b>	CSMA/CD
<b>Transfer Rate</b>	14,880 pps for 10Base-T Ethernet port 148,800 pps for 100Base-TX Fast Ethernet port
<b>MAC Address</b>	2K MAC address table
<b>Connector</b>	10/100TX: 5 x RJ-45 Power, P-Fail: 1 x 6 poles Removable Terminal Block
<b>PoE Pin Assignment</b>	RJ-45 port #1 ~ # 4 support IEEE 802.3af End-point, Alternative A mode. Positive (VCC+): RJ-45 pin 1, 2. Negative (VCC-): RJ-45 pin 3, 6. Data (1,2,3,6 )
<b>LED</b>	<b>Per unit:</b> Power 1 (Green), Power 2 (Green), P-Fail (Red) <b>Per port:</b> Link/Activity (Green), Full duplex/Collision (Amber) <b>PoE:</b> Feeding Power (Green)

<b>Network Cable</b>	10Base-T: 2-pair UTP/STP Cat. 3, 4, 5, 5e, 6 cable EIA/TIA-568 100-ohm (100m) 100Base-TX: 2-pair UTP/STP Cat. 5, 5e, 6 cable EIA/TIA-568 100-ohm (100m)
<b>Over Current Protection</b>	Fast-Blown Fuse
<b>Power Supply</b>	Redundant power DC 24/48V with connective removable terminal block
<b>Max Power Consumption</b>	62.5 Watts (@ 48V); 67 Watts (@ 24V) Full load with PoE function
<b>Installation</b>	DIN-Rail mounting, Wall mounting
<b>Operating Temp.</b>	-25°C to 60°C (standard model)
<b>Operating Humidity</b>	5% to 95% (Non-condensing)
<b>Storage Temp.</b>	-40°C to 85°C
<b>Case Dimension</b>	IP-30, 48.6mm (W) x 95mm (D) x 140mm (H)
<b>EMC</b>	FCC Class A, CE class A CE/ EN61000-4-2/3/4/5/6/8 CE/ EN61000-6-2 CE/ EN61000-6-4
<b>Safety</b>	cUL / UL 508
<b>Stability testing</b>	IEC60068-2-32 (Free fall) IEC60068-2-27 (Shock) IEC60068-2-6 (Vibration)

**Table-4: Technical Specification**

## About Korenix

### Less Time At Work! Fewer Budget on applications!

The Korenix business idea is to let you spend less time at work and fewer budget on your applications. Do you really want to go through all the troubles but still end up with low quality products and lousy services? Definitely not! This is why you need Korenix. Korenix offers complete product selection that fulfills all your needs for applications. We provide easier, faster, tailor-made services, and more reliable solutions. In Korenix, there is no need to compromise. Korenix takes care of everything for you!

### Fusion of Outstandings

**You can end** your searching here. Korenix Technology is your one-stop supply center for industrial communications and networking products. Korenix Technology is established by a group of professionals with more than 10 year experience in the arenas of industrial control, data communications and industrial networking applications. Korenix Technology is well-positioned to fulfill your needs and demands by providing a great variety of tailor-made products and services. Korenix's industrial-grade products also come with quality services. No more searching, and no more worries. Korenix Technology stands by you all the way through.

### Core Strength---Competitive Price and Quality

With our work experience and in-depth know-how of industrial communications and networking, Korenix Technology is able to combine Asia's research / development ability with competitive production cost and with quality service and support.

### Global Sales Strategy

Korenix's global sales strategy focuses on establishing and developing trustworthy relationships with value added distributors and channel partners, and assisting OEM distributors to promote their own brands. Korenix supplies products to match local market requirements of design, quality, sales, marketing and customer services, allowing Korenix and distributors to create and enjoy profits together.

### Quality Services

**KoreCARE---** KoreCARE is Korenix Technology's global service center, where our professional staffs are ready to solve your problems at any time and in real-time. All of Korenix's products have passed ISO-9000/EMI/CE/FCC/UL certifications, fully satisfying your demands for product quality under critical industrial environments. Korenix global service center's e-mail is [koreCARE@korenix.com](mailto:koreCARE@korenix.com)

### 5 Years Warranty

Each of Korenix's product line is designed, produced, and tested with high industrial standard. Korenix warrants that the Product(s) shall be free from defects in materials and workmanship for a period of five (5) years from the date of delivery provided that the Product was properly installed and used. This warranty is voided if defects, malfunctions or failures of the warranted Product are caused by damage resulting from force measure (such as floods, fire, etc.), environmental and atmospheric disturbances, other external forces such as power line disturbances, host computer malfunction, plugging the board in under power, or incorrect cabling; or the warranted Product is misused, abused, or operated, altered and repaired in an unauthorized or improper way

Korenix Technologies Co., Ltd.  
2F., No.188, Baociao Rd., Sindian City, Taipei County 23145, Taiwan

Tel:+886-2-89111000 Fax:+886-2-82193300

**Business service :** [sales@korenix.com](mailto:sales@korenix.com)

**Customer service:** [koreCARE@korenix.com](mailto:koreCARE@korenix.com)