



802.11n 3G Broadband Router

WNRT-625G

User's Manual



Copyright

Copyright © 2009 by PLANET Technology Corp. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of PLANET.

PLANET makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, this company reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

FCC Caution:

To assure continued compliance, (example-use only shielded interface cables when connecting to computer or peripheral devices) any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the Following two conditions: (1) This device may not cause harmful interference, and (2) this Device must accept any interference received, including interference that may cause undesired operation.

Federal Communication Commission (FCC) Radiation Exposure Statement

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20 cm (8 inches) during normal operation.

R&TTE Compliance Statement

This equipment complies with all the requirements of DIRECTIVE 1999/5/CE OF THE EUROPEAN PARLIAMENT AND THE COUNCIL OF 9 March 1999 on radio equipment and telecommunication terminal Equipment and the mutual recognition of their conformity (R&TTE).

The R&TTE Directive repeals and replaces in the directive 98/13/EEC (Telecommunications Terminal Equipment and Satellite Earth Station Equipment) As of April 8, 2000.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.



WEEE regulation

To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Revision

User's Manual for PLANET 802.11N Wireless Router
Model: WNRT-625G
Rev: 1.0 (April. 2009)

TABLE OF CONTENTS

CHAPTER 1 INTRODUCTION.....	5
1.1 PACKAGE CONTENTS	5
1.2 FEATURES	5
1.3 SPECIFICATION.....	5
CHAPTER 2 HARDWARE INSTALLATION / NETWORK SETUP	7
2.1 OUTLOOK	7
2.2 HARDWARE INSTALLATION	8
2.3 NETWORK SETUP	11
CHAPTER 3 WEB LOGIN	13
CHAPTER 4 QUICK SETUP	15
CHAPTER 5 GENERAL SETUP	27
5.1 SYSTEM	28
5.2 WAN	30
5.3 LAN	37
5.4 WIRELESS	39
5.5 QoS.....	51
5.6 NAT	54
5.7 FIREWALL	63
CHAPTER 6 STATUS	71
6.1 INTERNET CONNECTION.....	71
6.2 DEVICE STATUS	72
6.3 SYSTEM LOG	72
6.4 SECURITY LOG.....	73
6.5 ACTIVE DHCP CLIENT	74
6.6 STATISTICS.....	74
CHAPTER 7 TOOLS.....	75
7.1 CONFIGURATION TOOLS.....	75
7.2 FIRMWARE UPGRADE.....	76
7.3 RESET	77
CHAPTER 8 TROUBLESHOOTING	78

Chapter 1 Introduction

Thank you for purchasing WNRT-625G. This manual guides you on how to install and properly use the WNRT-625G in order to take full advantage of its features.

1.1 Package Contents

- WNRT-625G x 1
- Stand x 1
- Ethernet Cable x 1
- Power Adapter x 1
- CD-ROM (included user's manual) x 1
- Quick Installation Guide x 1

Note: If any of the above items are missing, please contact your supplier for support.

1.2 Features

- Dual WAN Interfaces: WAN port for cable or wired DSL service + 3G mobile connection
- Supports UMTS/HSDPA Mobile Internet Service
- IEEE 802.11n (Draft 2.0) wireless technology compliant with 802.11b/g standard
- Capable of up to 300Mbps data rate
- Supports Wi-Fi Protected Setup (WPS)
- Advanced security: 64/128-bit WEP, WPA –TKIP(PSK), WPA2-AES(PSK), 802.1x
- Access Private LAN Servers from the Public Network
- Equipped with four LAN ports (10/100M) and one WAN port (10/100M), Auto-MDI/MDI-X supported
- Supports DHCP Server
- System status monitoring includes Active DHCP Client, Security Log and Device/Connection Status
- Web-based GUI for and Wizard setup for easily configuration
- Remote Management allows configuration and upgrades from a remote site
- Supported Internet types: Dynamic / Static IP / PPPoE / PPTP / L2TP / Telstra Big Pond
- MAC / IP filter access control, URL blocking ; SPI firewall + DoS prevention protection
- Supports UPnP function

1.3 Specification

Standard	IEEE 802.11b/g, 802.11n Draft 2.0, IEEE802.3u
Signal Type	11b mode: DSSS 11g mode: OFDM 11n mode: OFDM, MIMO
Modulation	802.11b: DBPSK, DQPSK, CCK 802.11g: BPSK, QPSK, 16QAM, 64QAM 802.11n: BPSK, QPSK, 16QAM, 64QAM
WAN Port	1 x 100Base-TX, Auto-MDI/MDI-X
LAN Port	4 x 100Base-TX, Auto-MDI/MDI-X
Antenna connector	2 x Fixed 3dBi Dipole Antenna
Data Encryption	64 bit / 128 bit WEP, WPA-PSK, WPA, WPA2, 802.1x encryption
Output Power	11b: 18 dBm 11g: 15 dBm 11n: 15dBm

Data Rate	IEEE 802.11b: 11/5.5/2/1M IEEE 802.11g: 54/48/36/24/18/12/9/6	
N Data Rate	Table (1)	
Receiver Sensitivity	11b CCK 1.0Mbps -94dbm 11g OFDM 6Mbps -92dbm 11n 20MHz MCS7 : -72dbm	11b CCK 11.0Mbps -91dbm 11g OFDM 54Mbps -76dbm 11n 40MH MCS7 : -70dbm
Session	2000	
LED Indicators	PWR, WLAN, WAN * 1, LAN * 4	
Compatible Mobile network	UMTS/HSDPA	
Compatible mobile service provider	Please contact with PLANET Technical Support for latest information.	
Compatible internet PC adapter list	Please contact with PLANET Technical Support for latest information.	

N Data Rate Table (1)

MCS Index	HT20	HT40
	Data rate (Mbps) @ 400ns GI	
0	7.2	15.0
1	14.4	30.0
2	21.7	45.0
3	28.9	60.0
4	43.3	90.0
5	57.8	120.0
6	65.0	135.0
7	72.2	150.0

Chapter 2 Hardware Installation / Network Setup

Please follow the below instruction to build the wireless network connection between WNRT-625G and your computers.


2.1 Outlook

Front Panel



LED Name	Light Status	Description
POWER	On	Router is switched on and correctly powered.
WLAN	On	Wireless WPS function is enabled.
	Off	Wireless network is switched off.
	Flashing	Wireless LAN activity (transferring or receiving data).
WAN LNK/ACT	On	WAN port is connected.
	Off	WAN port is not connected.
	Flashing	WAN activity (transferring or receiving data).
USB LNK/ACT	On	USB modem is connected.
	Off	USB modem is not connected.
	Flashing	USB modem activity (transferring or receiving data).
LAN 1-4 LNK/ACT	On	LAN port is connected.
	Off	LAN port is not connected.
	Flashing	LAN activity (transferring or receiving data).

Back Panel

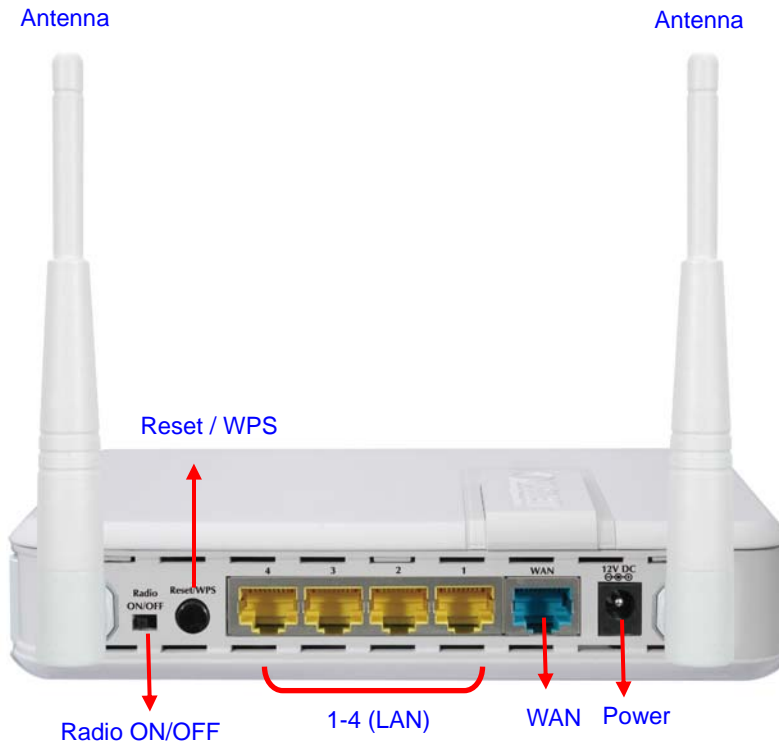

Item Name	Description
Antenna	Attached 3dBi dipole antenna.
Radio ON/OFF	Switch the button to activate or deactivate the wireless functions.
Reset / WPS	Reset the router to factory default settings (clear all settings) or start WPS function. Press this button and hold for 10 seconds to restore all settings to factory defaults, and press this button for less than 5 seconds to start WPS function.
1 - 4	Local Area Network (LAN) ports 1 to 4.
WAN	Wide Area Network (WAN / Internet) port.
Power	Power connector, connects to power adapter.

2.2 Hardware Installation

- 1. Locate an optimum location for the WNRT-625G.** The best place for your WNRT-625G is usually at the center of your wireless network, with line of sight to all of your mobile stations.
- 2. Adjust the antennas of WNRT-625G.** Try to adjust them to a position that can best cover your wireless network. The antenna's position will enhance the receiving sensitivity.
- 3. There are two way connecting to Internet, One is via 3G USB port, and another is from WAN port.**

3-1. Connect your 3G/3.5G USB modem to the USB port located in front panel of WNRT-625G.



NOTE: Please also check with your local dealer or PLANET Web site for supported 3G/3.5G USB adapter


3-2. Connect ADSL/Cable Modem to WAN port of WNRT-625G via RJ-45 Ethernet cable.



4. **Connect all of your network devices to LAN port of WNRT-625G.** Connect all your computers, network devices (network-enabled consumer devices other than computers, like game console, or switch / hub). Connect one of the LAN ports on WNRT-625G to your LAN switch/hub or a computer with a RJ-45 cable.



5. **Plug in power adapter and connect to power source.** After power on, WNRT-625G will start to operate.

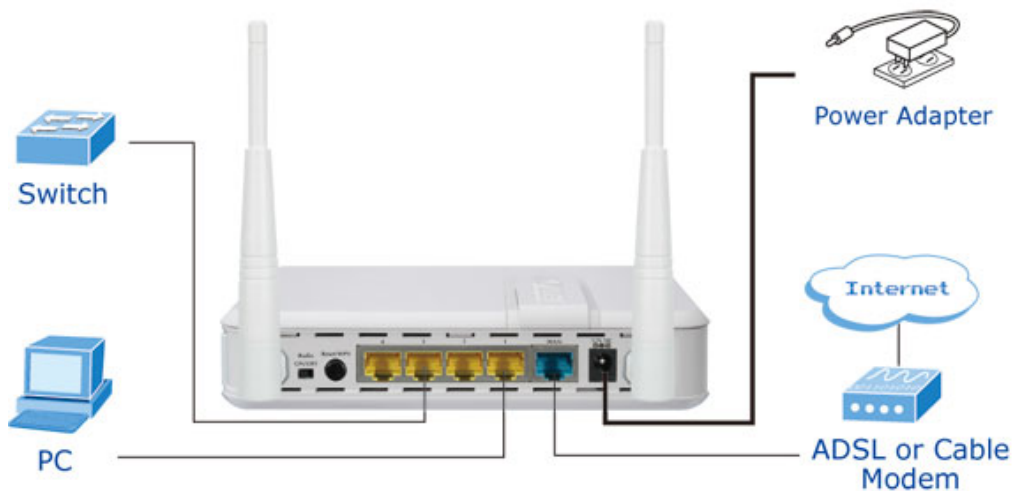

6. **Please check all LEDs on the front panel. 'PWR' LED should be steadily on.** WAN and LAN LEDs should be on if the computer / network device connected to the respective port of the router is powered on and correctly connected. If PWR LED is not on, or any LED you expected is not on, please recheck the cabling, or jump to 'Troubleshooting' for possible reasons and solution.


Note:

1. ONLY use the power adapter supplied with the WNRT-625G. Otherwise, the product may be damaged.
2. If you want to reset WNRT-625G to default settings, press and hold the **RST**(reset) button over 30 seconds and release. And then wait for WNRT-625G restart.


2.3 Network Setup

After you install your WNRT-625G, the TCP/IP settings should be set to obtain an IP address from a DHCP server (WNRT-625G) automatically. To verify your IP address, please follow the steps below:


1. Click on **Start > Run**.

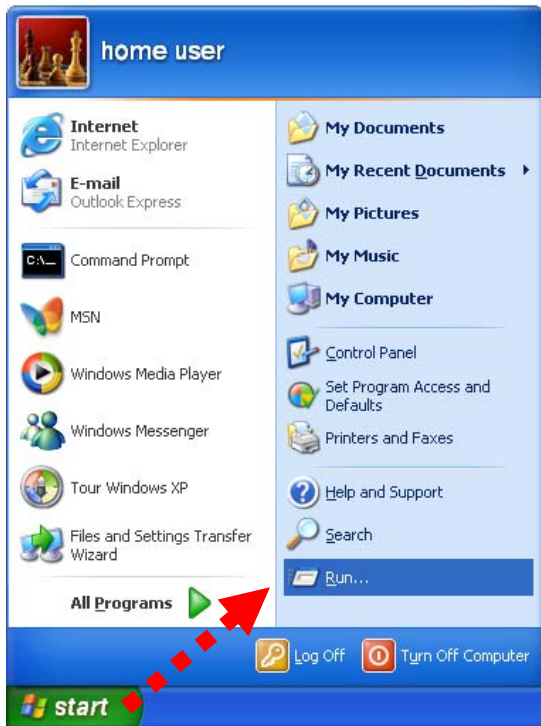

2. In the run box type "**cmd**" and click OK. (Windows VistaR users type cmd in the Start .Search box.)At the prompt.

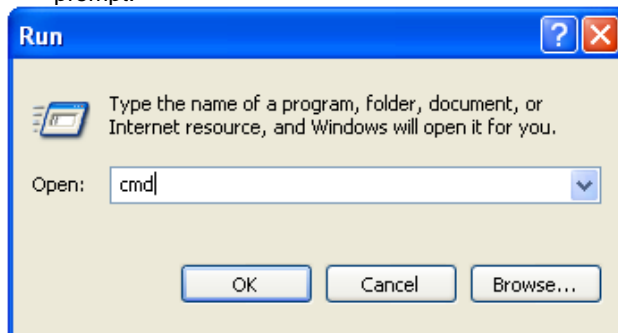

3. Type "**ipconfig**" and press **Enter**. It will display the IP address, subnet mask, and the default gateway of adapter.

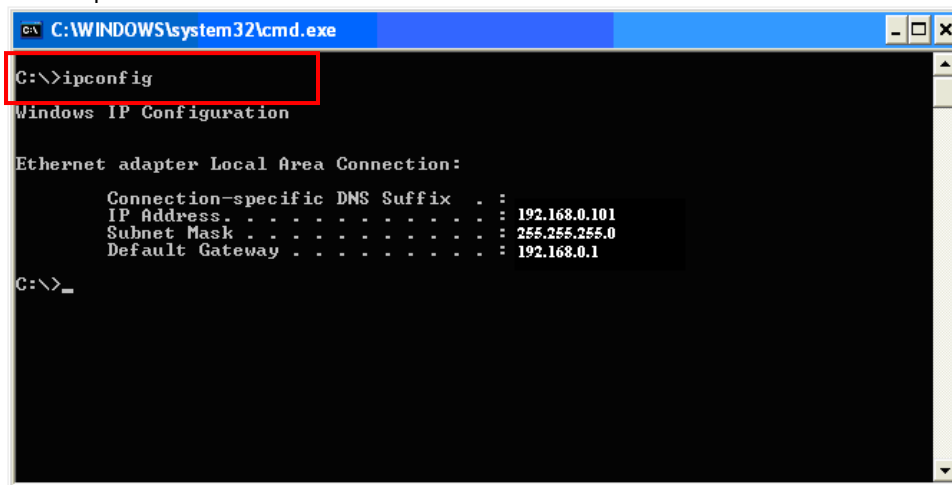

```
C:\WINDOWS\system32\cmd.exe
C:\>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : 
    IP Address . . . . . : 192.168.0.101
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.0.1

C:\>_
```

4. If the address is **0.0.0.0**, check your adapter installation, security settings, and the settings on your router. Some firewall software programs may block a DHCP request on newly installed adapters.

Assign a static IP address

If you are not using a DHCP capable gateway/router, or you need to assign a static IP address, please follow the steps below:

1. - **Windows Vista®** - Click on Start > Control .Panel > Network .and .Internet >Network .and .Sharing .Center > Manage Network Connections.
- **Windows® XP** - Click on Start > Control .Panel > Network Connections.
- **Windows® 2000** - From the desktop, right-click My Network Places > Properties.
2. Right-click on the Local Area Connection which represents your network adapter and select Properties.
3. Highlight Internet .Protocol .(TCP/IP) and click Properties.
4. Click Use .the .following .IP .address and enter an IP address that is on the same subnet as your network or the LAN IP address on your router.
Example: If LAN IP address of WNRT-625G is 192.168.0.1, make your IP address 192.168.0.X where X is a number between 2 and 99. Make sure that the number you choose is not in use on the network. Set Default Gateway the same as the LAN IP address of your router (192.168.0.1). Set Primary DNS the same as the LAN IP address of your router (192.168.0.1). The Secondary DNS is not needed or you may enter a DNS server from your ISP.
5. Click OK twice to save your settings.


Chapter 3 Web Login

WNRT-625G with an assigned IP address allows you to monitor and configure via web browser (e.g., MS Internet Explorer or Netscape).

1. Open your web browser.
2. Enter the IP address of your WNRT-625G in the address field (default IP address is **http://192.168.0.1**).
3. Please enter your User Name and Password in the dialog box. Default User Name and Password are both **“admin”**. Click OK.



4. Then you will see the WNRT-625G HOME screen as below.

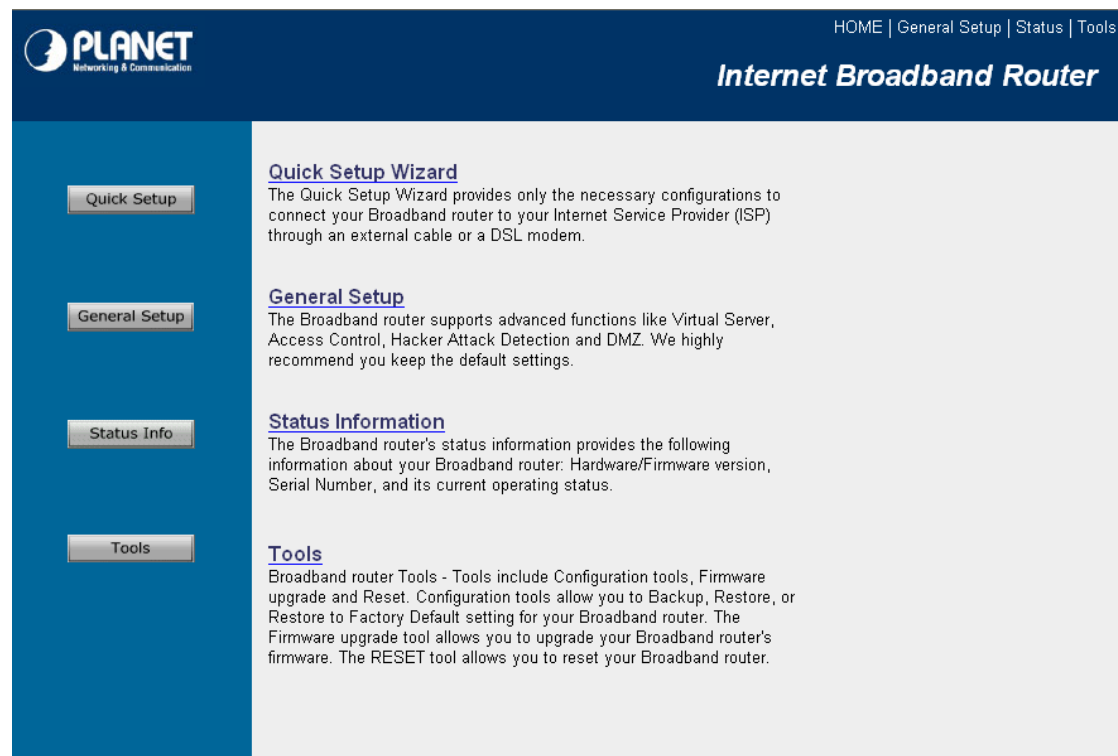

HOME | General Setup | Status | Tools

Internet Broadband Router

Quick Setup

[Quick Setup Wizard](#)
The Quick Setup Wizard provides only the necessary configurations to connect your Broadband router to your Internet Service Provider (ISP) through an external cable or a DSL modem.

General Setup

The Broadband router supports advanced functions like Virtual Server, Access Control, Hacker Attack Detection and DMZ. We highly recommend you keep the default settings.

Status Information

The Broadband router's status information provides the following information about your Broadband router: Hardware/Firmware version, Serial Number, and its current operating status.

Tools

Broadband router Tools - Tools include Configuration tools, Firmware upgrade and Reset. Configuration tools allow you to Backup, Restore, or Restore to Factory Default setting for your Broadband router. The Firmware upgrade tool allows you to upgrade your Broadband router's firmware. The RESET tool allows you to reset your Broadband router.

The left panel provides four options, **Quick Setup**, **General Setup**, **Status Information** and **Tools**.

Section	Description
Quick Setup	Select your Internet connection type and then input the configurations needed to connect to your Internet Service Provider (ISP).
General Setup	This section contains configurations for the Broadband router's advance functions such as: Port Forwarding, Virtual Server, Access Control, Hacker Attack Prevention, DMZ, Special applications and other functions to meet your LAN requirements. You can also configure the wireless detail settings here.
Status Info	This option provides you the system information, Internet Connection, Device Status, Security Log and DHCP client Log information.
Tools	This option contains Configuration tools, Firmware Upgrade and Reset functions.

Chapter 4 Quick Setup

This section describes the basic configuration of the WNRT-625G and allows you to connect to Internet easily.

4.1 Time Zone

The time information is used for Log entries and Firewall settings. You can keep the default Time Server address or set a new IP address for your router to synchronize its time. Click “Next” to continue.

The screenshot shows the configuration interface for the Planet Internet Broadband Router. The page title is "Internet Broadband Router" and the navigation bar includes "Home | General Setup | Status | Tools". A sidebar on the left lists the setup steps: 1. Time Zone (selected), 2. WAN Type, 3. IP Address Info, 4. Wireless Settings, and 5. Security Settings. The main content area is titled "Time Zone" and includes the instruction: "Set the time zone of the Wireless Router. This information is used for log entries and firewall settings." The configuration fields are:

- Time Zone :** A dropdown menu set to "(GMT+00:00)Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London".
- Time Server Address :** A text input field containing "192.43.244.18".
- Daylight Savings :** An "Enable" checkbox that is currently unchecked. Below it, the "Time From" is set to "January 1" and "To" is set to "January 1".

 A "NEXT" button is located at the bottom right of the configuration area.

Parameter	Description
Set Time Zone	Select the time zone of the country you are currently in. The router will set its time based on your selection.
Time Server Address	Remain it as default or, you can manually assign an IP address of the Time Server. The information of Timer Server can be found in the following URL link: http://www.eecis.udel.edu/~mills/ntp/servers.html or http://www.ntp.org .
Enable Daylight Savings	The router can also take Daylight savings into account. To enable this function, check/tick the “Enable Function” box and select which days this function will work.

Click “Next” button to proceed to the next step.

4.2 WAN Type

Before establishing the Internet connection, please be sure to check with your ISP, and obtain all necessary information from them.

3G/3.5G
If you connect to Internet using an 3G/3.5G handset or 3G/3.5G USB modem, then you should choose this option and enter the required information.

Cable Modem
A connection through a cable modem requires minimal configuration. When you set up an account with your Cable provider, the Cable provider and your Wireless Router will automatically establish a connection, so you probably do not need to enter anything more.

Fixed-IP xDSL
Some xDSL Internet Service Providers may assign a Fixed IP Address for your Wireless Router. If you have been provided with this information, choose this option and enter the assigned IP Address, Subnet Mask, Gateway IP Address and DNS IP Address for your Wireless Router.

PPPoE xDSL
If you connect to the Internet using an xDSL Modem and your ISP has provided you with a Password and a Service Name, then your ISP uses PPPoE to establish a connection. You must choose this option and enter the required information.

PPTP xDSL
If you connect to the Internet using an xDSL Modem and your ISP has provided you with a Password, Local IP Address, Remote IP Address and a Connection ID, then your ISP uses PPTP to establish a connection. You must choose this option and enter the required information.

L2TP xDSL
Layer Two Tunneling Protocol is a common connection method used in xDSL connections.

Telstra Big Pond
If your Internet service is provided by Telstra Big Pond in Australia, you will need to enter your information below, This information is provided by Teistra BigPond.

Broadband	Description
3G/3.5G	With 3G mobile USB adapter providing Internet service. Please refer to section 4.2.1 for details.
Cable Modem	ISP will automatically give you an IP address. Please refer to section 4.2.2 for details.
Fixed-IP Xdsl	ISP has given you a fixed IP address already. Please refer to section 4.2.3 for details.
PPPoE xDSL	ISP requires you to use a Point-to-Point Protocol over Ethernet (PPPoE) connection. Please refer to section 4.2.4 for details.
PPTP xDSL	ISP requires you to use a Point-to-Point Tunneling Protocol (PPTP) connection. Please refer to section 4.2.5 for details.
L2TP XDSL	This is not widely used. You need to know the PPTP Server address as well as your name and password. Please refer to section 4.2.6 for details.
Telstra Big Pond	This option is for Australia only. Please refer to section 4.2.78 for details.

4.2.1 3G/3.5G

With 3G mobile USB adapter providing Internet service. Some ISP may also require you to fill in additional information.

3G/3.5G

Your service provider settings will be detected automatically. If the settings are not the same as defaults, please enter the Authentication Method, User Name, Password, APN, PIN Code and Dialed Number provided to you by your ISP in the appropriate fields.

- **Network Settings :**

User Name :	<input style="width: 95%;" type="text"/>
Password :	<input style="width: 95%;" type="password"/>
PIN Code :	<input style="width: 95%;" type="text"/>
APN :	<input style="width: 95%;" type="text" value="internet"/>
- **Advanced PPP Settings :**

Username :	<input style="width: 95%;" type="text"/>
Password :	<input style="width: 95%;" type="password"/>
Verify Password :	<input style="width: 95%;" type="password"/>
Service :	<input style="width: 95%;" type="text" value="3G/3.5G Only (UMTS/HSPA/HSDPA)"/> ▼
AT Dial Script :	<input style="width: 95%;" type="text" value="*99#"/>

Parameters	Description
PIN Code	Please input Pin Code for your UMTS or HSDPA or EVDO connection, this is optional, and only required if your service provider asks you to do so. APN
User Name	Please input user name assigned by your Internet service provider here. Password
Password	Please input password again for confirmation.
Verify Password	Please input password again for confirmation.
APN	Please input the APN code assigned by your Internet service provider here.
Service	Please select your Card type from the drop-down menu.
AT Dial Script	Please input Dialed Number for your UMTS or HSDPA connection, the default is *99#. This field should not be altered except when required by your service provider.

4.2.2 Cable Modem

With Cable Modem connection, the ISP will automatically give you an IP address. Some ISP may also require you to fill in additional information such as Host Name and MAC address (see screen below).

Note: The Host Name and MAC address section is **optional** and you can skip this section if your ISP does not require these settings for you to connect to the Internet.

PLANET Networking & Communication | Home | General Setup | Status | Tools | Internet Broadband Router

1. Time Zone
2. WAN Type
3. IP Address Info
4. Wireless Settings
5. Security Settings

3. IP Address Info ?

Dynamic IP

Cable Modem

Host Name :	<input type="text"/>
MAC Address :	<input type="text" value="000000000000"/> <input type="button" value="Clone MAC"/>
TTL:	<input checked="" type="radio"/> TTL Standard <input type="radio"/> TTL+1 <input type="radio"/> TTL=1 <input type="radio"/> User Defined <input type="text" value="254"/>

Parameters	Description
Host Name	Type in the host name provided by your ISP if any; otherwise, just leave it blank.
MAC Address	To connect to Internet, your ISP will require a MAC address from your PC. Type in this MAC address in this section or use the "Clone MAC Address" button to replace the WAN port MAC address with the your PC's.

When the configuration finished, click "OK" to next step or click "Back" to previous step. After press "OK", you will see a web screen to prompt you the configurations save successfully. You may press "Apply" to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

4.2.3 Fixed-IP xDSL

Select Fixed-IP xDSL if you're ISP has given you a specified IP address. Your ISP should provide all the information required in this section.

PLANET Networking & Communication | Home | General Setup | Status | Tools | Internet Broadband Router

1. Time Zone
2. WAN Type
3. IP Address Info
4. Wireless Settings
5. Security Settings

3. IP Address Info ?

Static IP

Enter the IP Address, Subnet Mask, Gateway IP Address and DNS IP Address provided to you by your ISP in the appropriate fields.

IP Address :	<input type="text" value="172.1.1.1"/>
Subnet Mask :	<input type="text" value="255.255.0.0"/>
DNS Address :	<input type="text"/>
Default Gateway :	<input type="text" value="172.1.1.254"/>
TTL:	<input checked="" type="radio"/> TTL Standard <input type="radio"/> TTL+1 <input type="radio"/> TTL=1 <input type="radio"/> User Defined <input type="text" value="254"/>

Parameters	Description
IP address assigned by your Service Provider	The IP address that you're ISP should provide you.
Subnet Mask	Enter the Subnet Mask provided by your ISP (e.g. 255.255.255.0).
DNS Address	The IP address of ISP's DNS (Domain Name Service) Server.
Service Provider Gateway Address	The ISP's IP address gateway.

Please consult your local ISP about the information above. When the configuration finished please click "OK" to next step or click "Back" to previous step. After press "OK", you will see a web screen to prompt you the configurations save successfully. Please refer to section 4.2.7 for the information of this screen.

4.2.4 PPPoE xDSL

Select PPPoE if your ISP requires the PPPoE protocol for Internet connectivity. Your ISP should provide all the information like user name, password required in this section.

The screenshot shows the configuration interface for an Internet Broadband Router. The page title is "Internet Broadband Router" and the logo for "PLANET Networking & Communication" is visible. The navigation menu on the left includes: 1. Time Zone, 2. WAN Type, 3. IP Address Info (selected), 4. Wireless Settings, and 5. Security Settings. The main content area is titled "3. IP Address Info" and "PPPoE". It contains a text box with instructions: "Enter the User Name and Password required by your ISP in the appropriate fields. If your ISP has provided you with a 'Service Name' enter it in the Service Name field, otherwise, leave it blank." Below this are several input fields: "User Name", "Password", "Service Name", "MTU" (set to 1492, with a range of 512 to 1492), "Connection Type" (set to Continuous, with "Connect" and "Disconnect" buttons), "Idle Time Out" (set to 10, with a range of 1-1000 Minute), and "TTL" (with radio buttons for "TTL Standard", "TTL+1", "TTL=1", and "User Defined" set to 254). At the bottom right are "BACK" and "NEXT" buttons.

Parameters	Description
User Name	Enter the User Name provided by your ISP for the PPPoE connection.
Password	Enter the Password provided by your ISP for the PPPoE connection.
Service Name	This is an optional parameter. Leave it blank unless your ISP requires it.
MTU	This is an optional parameter. You can specify the maximum size of transmission packet to the Internet. The range of the MTU will be from 512 to 1492. You can also consult you ISP for the optimal MTU as well. Default: 1392.

Connection Type	<p>If you select “Continuous”, the router will always connect to the ISP. If the WAN line breaks down and links again, the router will auto-reconnect to the ISP.</p> <p>If you select “Connect On Demand”, the router will auto-connect to the ISP when a client in LAN want to use the Internet and keep connected until the WAN idle timeout. The router will close the WAN connection if the time period that no one is using the Internet exceeds the “Idle Time”.</p> <p>If you select “Manual”, the router will connect to ISP only when you click “Connect” manually from the Web user interface. The WAN connection will not disconnected due to the idle timeout. If the WAN line breaks down and latter links again, the router will not auto-connect to the ISP. Default: Continuous.</p>
Idle Time	<p>You can specify an idle time threshold (minutes) for the WAN port. This means if no packets have been sent (no one using the Internet) during this specified period, the router will automatically disconnect the connection from your ISP.</p> <p>Note: This “idle timeout” function may not work due to abnormal activities of some network application software, computer virus or hacker attacks from the Internet. For example, some software sends network packets to the Internet in the background, even when you are not using the Internet. So please turn off your computer when you are not using it. This function also may not work with some ISP. So please make sure this function can work properly, especially when your ISP charges you by time used.</p>

When the configuration finished, click “Apply” to next step or click “Cancel” to previous step. After press “Apply”, you will see a web screen to prompt you the configurations save successfully. Please refer to section 4.2.7 for the information of this screen.

4.2.5 PPTP xDSL

Select PPTP if your ISP requires the PPTP protocol to connect to the Internet. Your ISP should provide all the information required in this section.

| Home | General Setup | Status | Tools |

Internet Broadband Router

PLANET
Networking & Communication

- ✓ 1. Time Zone
- ✓ 2. WAN Type
- ✓ 3. IP Address Info
- 4. Wireless Settings
- 5. Security Settings

3. IP Address Info

PPTP

Point-to-Point Tunneling Protocol is a common connection method used in xDSL connections.

- WAN Interface Settings
 - Obtain an IP Address Automatically

Host Name :	<input type="text"/>
MAC Address :	<input type="text" value="000000000000"/> <input type="button" value="Clone MAC"/>
 - Use The Following IP Address

IP Address :	<input type="text" value="0.0.0.0"/>
Subnet Mask :	<input type="text" value="0.0.0.0"/>
Default Gateway :	<input type="text" value="0.0.0.0"/>
- PPTP Settings

User Name :	<input type="text"/>
Password :	<input type="text"/>
PPTP Gateway :	<input type="text" value="0.0.0.0"/>
Connection ID :	<input type="text"/> (Optional)
MTU :	<input type="text" value="1392"/> (512<=MTU<=1492)

Parameter	Description
Obtain an IP address	Select it if the ISP requires you to obtain an IP address by DHCP automatically.
Host Name	Type in the host name provided by your ISP if any; otherwise, just leave it blank.
MAC Address	To connect to the Internet, your ISP will require a MAC address from your PC. Type in this MAC address in this section or use the "Clone MAC Address" button to replace the WAN port MAC address with the MAC address of that PC.
Use the following IP address	Select it if the ISP provides you a static IP to connect to the PPTP server.
IP Address	This is the IP address that your ISP has given you to establish a PPTP connection.
Subnet Mask	Enter the Subnet Mask provided by your ISP (e.g. 255.255.255.0)
Gateway	Enter the IP address of the ISP's Gateway.
User ID	Enter the User Name provided by your ISP for the PPTP connection. Sometimes called a Connection ID.
Password	Enter the Password provided by your ISP for the PPTP connection
PPTP Gateway	If your LAN has a PPTP gateway, enter that PPTP gateway's IP address here. If you do not have a PPTP gateway, enter the ISP's Gateway IP address above.
Connection ID	This is the ID given by ISP. This is an optional parameter.
MTU	This is an optional parameter. You can specify the maximum size of transmission packet to the Internet. The range of the MTU will be from 512 to 1492. You can also consult you ISP for the optimal MTU as well. Default: 1392
BEZEQ-ISRAEL	Select this item if you are using the service provided by BEZEQ in Israel.
Connection Type	If you select " Continuous ", the router will always connect to the ISP. If the WAN line breaks down and links again, the router shall auto- reconnect to the ISP.

	<p>If you select "Connect On Demand", the router will auto-connect to the ISP when a client in LAN wants to use the Internet and keep connected until the WAN idle timeout. The router will close the WAN connection if the time period that no one is using the Internet exceeds the "Idle Time".</p> <p>If you select "Manual", the router will connect to ISP only when you click "Connect" manually from the Web user interface. The WAN connection will not disconnect due to the idle timeout. If the WAN line breaks down and latter links again, the router will not auto-connect to the ISP. Default: Continuous.</p>
Idle Time	<p>You can specify an idle time threshold (minutes) for the WAN port. This means if no packets have been sent (no one using the Internet) throughout this specified period, the router will automatically disconnect to with your ISP.</p> <p>Note: This "idle timeout" function may not work due to abnormal activities of some network application software, computer virus or hacker attacks from the Internet. For example, some software sends network packets to the Internet in the background, even when you are not using the Internet. So please turn off your computer when you are not using it. This function also may not work with some ISP. So please make sure this function can work properly, especially when your ISP charges you by time used.</p>

When the configuration finished please click "OK" to next step or click "Back" to previous step. After press "OK", you will see a web screen to prompt you the configurations save successfully. Please refer to section 4.2.7 for the information of this screen.

4.2.6 L2TP xDSL

Select L2TP if your ISP requires the L2TP protocol to connect to the Internet. Your ISP should provide all the information required in this section.

3. IP Address Info

L2TP

Layer Two Tunneling Protocol is a common connection method used in xDSL connections.

- WAN Interface Settings

Obtain an IP Address Automatically

Host Name :	<input type="text"/>
MAC Address :	<input type="text" value="000000000000"/> <input type="button" value="Clone MAC"/>

Use The Following IP Address

IP Address :	<input type="text" value="0.0.0.0"/>
Subnet Mask :	<input type="text" value="0.0.0.0"/>
Default Gateway :	<input type="text" value="0.0.0.0"/>

- L2TP Settings

User Name :	<input type="text"/>
Password :	<input type="text"/>
L2TP Gateway :	<input type="text"/>
MTU :	<input type="text" value="1392"/> (512<=MTU<=1492)
Connection Type :	<input type="button" value="Continuous"/> <input type="button" value="Connect"/> <input type="button" value="Disconnect"/>

Parameter	Description
Obtain an IP address	Select it if the ISP requires you to obtain an IP address by DHCP automatically.
Host Name	If your ISP requires a Host Name, type in the host name provided by your ISP; otherwise, just leave it blank.
MAC Address	To connect to the Internet, your ISP will require a MAC address from your PC. Type in this MAC address in this section or use the “Clone MAC Address” button to replace the WAN port MAC address with the MAC address of that PC.
Use the following IP address	Select it if the ISP provides you a static IP to connect to the L2TP server.
IP Address	This is the IP address that your ISP has given you to establish a L2TP connection.
Subnet Mask	Enter the Subnet Mask provided by your ISP (e.g. 255.255.255.0)
Gateway	Enter the IP address of the ISP’s Gateway.
User ID	Enter the User Name provided by your ISP for the L2TP connection. Sometimes called a Connection ID.
Password	Enter the Password provided by your ISP for the L2TP connection
L2TP Gateway	If your LAN has a L2TP gateway, enter that L2TP gateway’s IP address here. If you do not have a L2TP gateway, enter the ISP’s Gateway IP address above.
MTU	This is an optional parameter. You can specify the maximum size of transmission packet to the Internet. The range of the MTU will be from 1492 to 512. You can also consult you ISP for the optimal MTU as well. Default: 1392
Connection Type	If you select “ Continuous ”, the router will always connect to the ISP. If the WAN

	<p>line breaks down and links again, the router shall auto- reconnect to the ISP.</p> <p>If you select “Connect On Demand”, the router will auto-connect to the ISP when someone wants to use the Internet and keep connected until the WAN idle timeout. The router will close the WAN connection if the time period that no one is using the Internet exceeds the “Idle Time”.</p> <p>If you select “Manual”, the router will connect to ISP only when you click “Connect” manually from the Web user interface. The WAN connection will not disconnect due to the idle timeout. If the WAN line breaks down and latter links again, the router will not auto-connect to the ISP. Default: Continuous.</p>
Idle Time	<p>You can specify an idle time threshold (minutes) for the WAN port. This means if no packets have been sent (no one using the Internet) throughout this specified period, then the router will automatically disconnect the connection with your ISP.</p> <p>Note: This “idle timeout” function may not work due to abnormal activities of some network application software, computer virus or hacker attacks from the Internet. For example, some software sends network packets to the Internet in the background, even when you are not using the Internet. So please turn off your computer when you are not using it. This function also may not work with some ISP. So please make sure this function can work properly, especially when your ISP charges you by time used.</p>

When the configuration finished please click “OK” to next step or click “Back” to previous step. After press “OK”, you will see a web screen to prompt you the configurations save successfully. Please refer to section 4.2.7 for the information of this screen.

4.2.7 Telstra Big Pond

Select Telstra Big Pond if you are live in Australia and your ISP requires this protocol to connect to the Internet. Your ISP should provide all the information required in this section.

3. IP Address Info

Telstra Big Pond

If your Internet service is provided by Telstra Big Pond in Australia, you will need to enter your information below, This information is provided by Teistra BigPond.

User Name :	
Password :	
<input type="checkbox"/> Assign login server manually	
Server IP Address :	0.0.0.0

BACK
NEXT

Parameters	Description
User Name	Enter the User Name provided by your ISP for the connection.
Password	Enter the Password provided by your ISP for the connection.
User Decide login server manually	If you ISP has provide the login server IP address to you, please check this box and enter the Login Server IP address below.
Login Server	Please enter the Login Server IP address here.

When the configuration finished please click "OK" to next step or click "Back" to previous step. After press "OK", you will see a web screen to prompt you the configurations save successfully. Please refer to section 4.2.7 for the information of this screen.

4.3 Basic Settings

In this page, allows you configure wireless information, the detail information please refer to 5.4.1

4. Basic Settings

This page allows you to define ESSID, and Channel for the wireless connection. These parameters are used for the wireless stations to connect to the Access Point.

Wireless Module : Enable Disable

Band :	2.4 GHz (B+G+N)
SSID :	default
Channel Number :	11
Associated Clients :	<input type="button" value="Show Active Clients"/>

4.4 Security Settings

In this page, allows you configure wireless security to protect the data transition between AP and wireless clients, the detail information please refer to 5.4.3

5. Security Settings


This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

Encryption :	Disable
---------------------	---------


Enable 802.1x Authentication

4.5 Save Settings Successfully

When you press “OK” in above configuration, the settings will be saved and the screen appears as below. Before WNRT-625G restarting, the settings are saved, but not function yet. Press “Apply” to restart WNRT-625G for the change to take effect immediately.

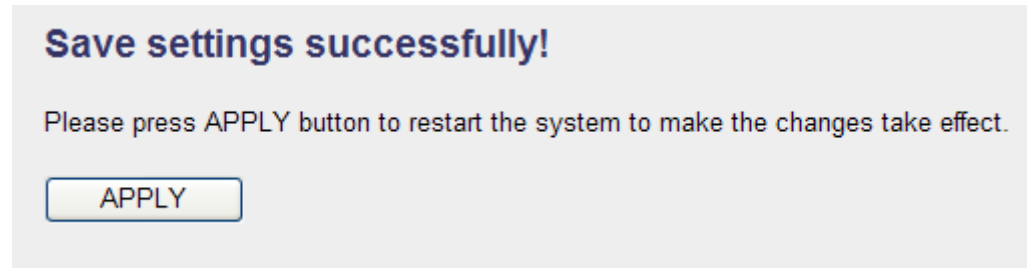


Please wait for 30 seconds for WNRT-625G restarting. After restart procedure finished, please click “OK” to return to HOME screen.

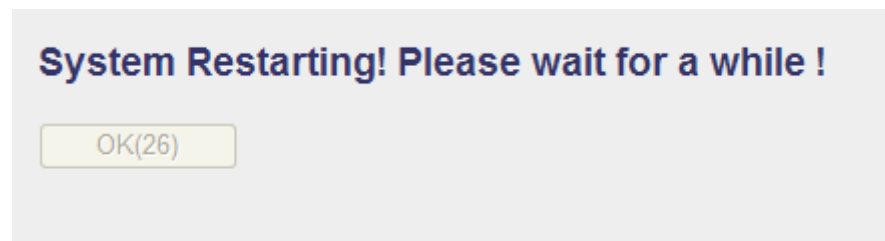

Chapter 5 General Setup


After click on the “General Setup” button at the main Page, you should see the screen below.

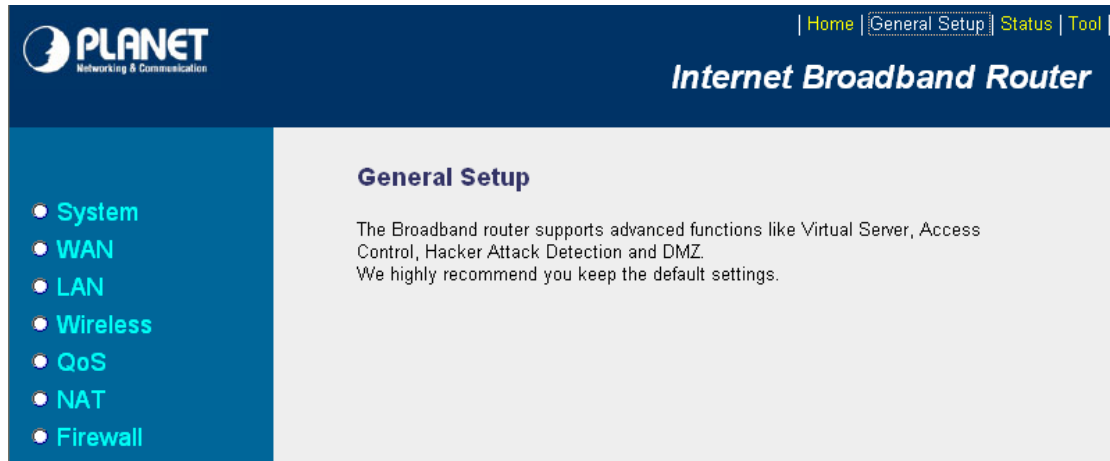

The General Setup contains advanced features that allow you to configure the router to meet the network's needs such as: Wireless, Port Forwarding, Virtual Server, Access Control, URL Blocking, Special Applications, DMZ and other functions.

5.1 System


This section shows how to setup the Broadband router's system Time Zone, Password and Remote Management Administrator.

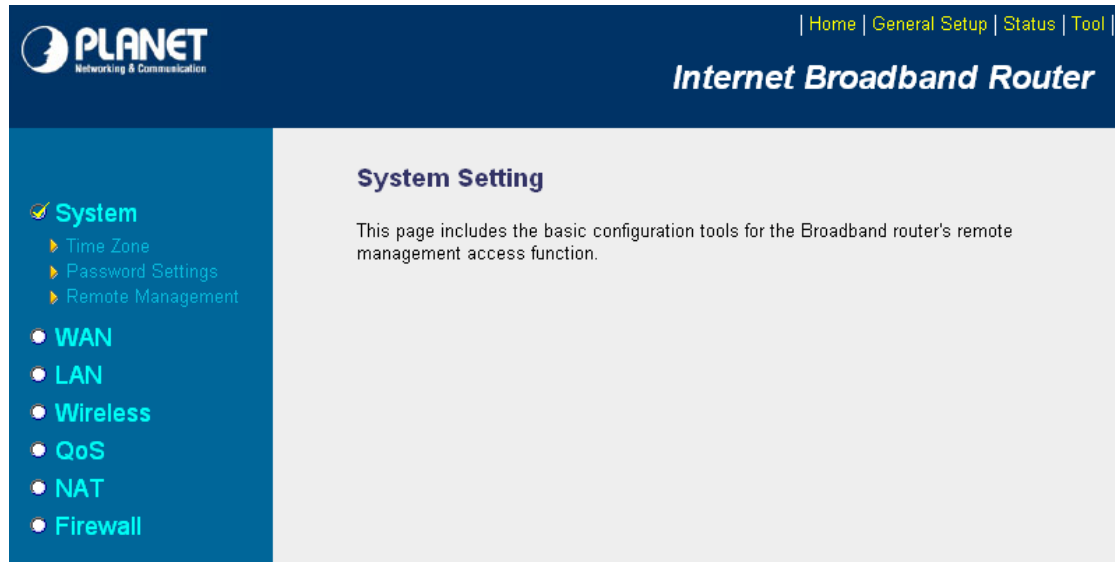

The screenshot shows the Planet Internet Broadband Router configuration interface. The top navigation bar includes links for Home, General Setup, Status, and Tool. The main heading is 'Internet Broadband Router'. On the left, a sidebar menu lists various configuration categories: System (checked), Time Zone, Password Settings, Remote Management, WAN, LAN, Wireless, QoS, NAT, and Firewall. The main content area is titled 'System Setting' and contains the text: 'This page includes the basic configuration tools for the Broadband router's remote management access function.'

5.1.1 Time Zone

The Time Zone allows WNRT-625G to allocate its time on the settings configured here; it will affect log display functions such as Security Log and Firewall settings.

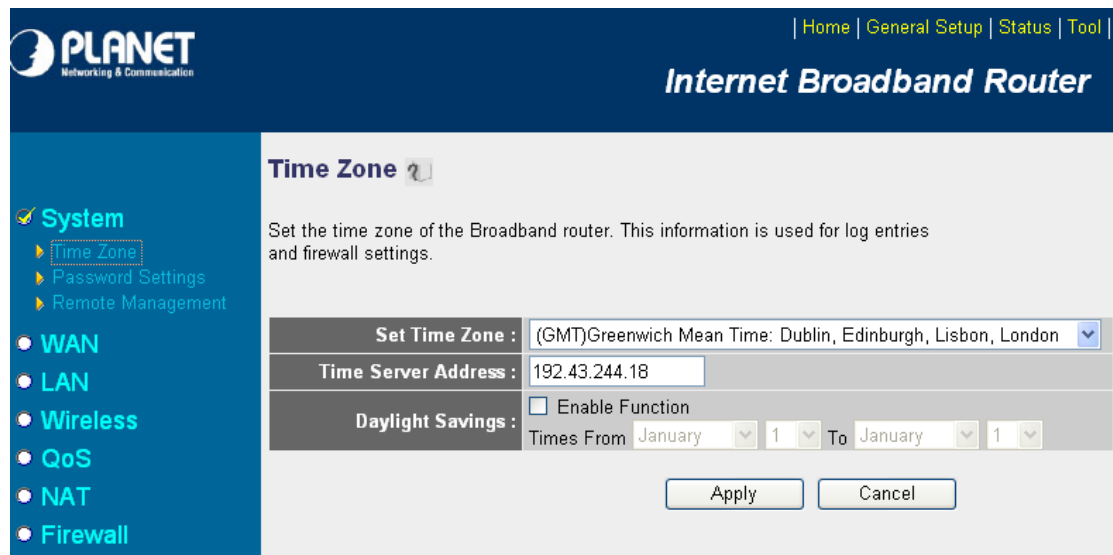

The screenshot shows the Planet Internet Broadband Router configuration interface for the Time Zone settings. The top navigation bar includes links for Home, General Setup, Status, and Tool. The main heading is 'Internet Broadband Router'. On the left, a sidebar menu lists various configuration categories: System (checked), Time Zone (highlighted), Password Settings, Remote Management, WAN, LAN, Wireless, QoS, NAT, and Firewall. The main content area is titled 'Time Zone' and contains the text: 'Set the time zone of the Broadband router. This information is used for log entries and firewall settings.' Below this text are three configuration rows: 'Set Time Zone' with a dropdown menu showing '(GMT)Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London'; 'Time Server Address' with a text input field containing '192.43.244.18'; and 'Daylight Savings' with a checkbox for 'Enable Function' and a 'Times From' field set to 'January 1' and a 'To' field set to 'January 1'. At the bottom right, there are 'Apply' and 'Cancel' buttons.

Parameter	Description
Set Time Zone	Select the time zone of the country you are currently in. The router will set its time based on your selection.

Time Server Address	You can keep the default IP address or enter a new Time Server Address for this device to synchronize its time. You can also refer to the web site http://www.ntp.org to find a nearest time server.
Daylight Savings	The router can also take Daylight savings into account. Select the check box to enable your daylight saving configuration. You can set the days that you wish to start and stop daylight Savings Time.

After the setup completed, please click “Apply” to save the settings. After press “Apply”, you will see a web screen to prompt you the configurations save successfully. You may refer to section 4.2.7 for the information of this screen.

5.1.2 Password Setup

This screen allows you to change the management password.


Parameters	Description
Current Password	Enter your current password for the remote management administrator to login to your Broadband router.
New Password	Enter your new password.
Confirmed Password	Enter your new password again for verification purposes.

After the setup completed, please click “Apply” to save the settings. After press “Apply”, you will see a web screen to prompt you the configurations save successfully. You may refer to section 4.2.7 for the information of this screen.

Note: If you forget the password, please reset the WNRT-625G to the factory default by press **RST/WPS** button (on WNRT-625G's rear panel) over 30 seconds.

5.1.3 Remote Management

You can specify a Host IP address that can perform remote management from Internet.

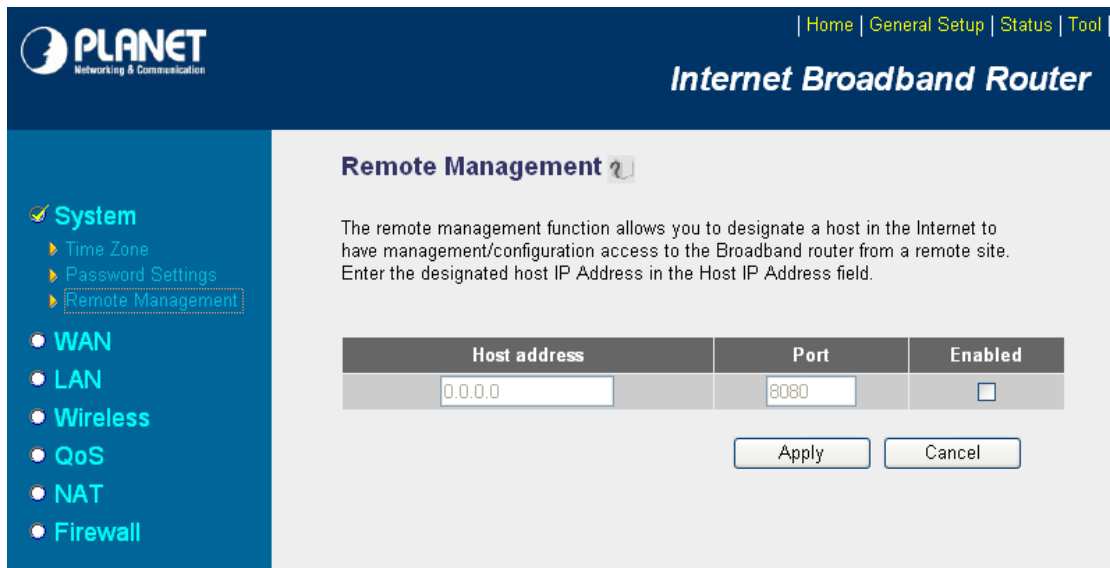

Parameters	Description
Host Address	<p>The IP address of the host on Internet that will have management / configuration access to the Broadband router. Leave it to 0.0.0.0 means anyone can access the router's web-based configuration from any remote location.</p> <p>Click the Enabled box to enable the Remote Management function.</p> <p>Note: When you want to access the web-based management from a remote site, you must enter the router's WAN IP address (e.g. 10.0.0.1) into your web-browser followed by port number 8080, e.g. 10.0.0.1:8080 (see below). You'll also need to know the password set in the Password Setting screen in order to access the management pages.</p>

After the setup completed, please click "Apply" to save the settings. After press "Apply", you will see a web screen to prompt you the configurations save successfully. You may refer to section 4.2.7 for the information of this screen.

5.2 WAN

The WAN Settings screen allows you to specify the type of Internet connection. The WAN settings offer the following selections for the router's WAN port, **Dynamic IP**, **Static IP**, **PPPoE**, **PPTP**, **L2TP**, and **Telstra Big Pond**. Please select one of the connection types and click "More Configuration" button or select the option on the left window for configuration.

WAN

The Wireless Router can connect to your Internet Service Provider with the following methods.

- Dynamic IP** Obtains an IP Address automatically from your Service Provider.
- Static IP** Uses a Static IP Address. Your Service Provider gives a Static IP Address to access Internet services.
- PPPoE** PPP over Ethernet is a common connection method used in xDSL connections.
- PPTP** Point-to-Point Tunneling Protocol is a common connection method used in xDSL connections.
- L2TP** Layer Two Tunneling Protocol is a common connection method used in xDSL connections.
- Telstra Big Pond** Telstra Big Pond is a Internet service is provided in Australia.

[More Configuration](#)

5.2.1 Fail Over

WAN failure detection works by detecting the presence of traffic on the 3G modem link. If the link is idle for too long the router will attempt to ping a target IP address. If the ping does not reply, the router assumes the link is down and attempts to fail over to Ethernet WAN link.

Fail Over

Configure the priority of existing WAN connections and the rule for WAN fail over.

WAN FailOver :	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
WAN Priority :	3G/3.5G <input type="button" value="v"/>
Idle Timeout Detect :	0 <input type="text"/> sec.
Ping Target IP :	0.0.0.0 <input type="text"/>
E-Mail Notification :	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
SMTP Server :	<input type="text"/>
Mail Address From :	<input type="text"/>
Mail Address TO :	<input type="text"/>


[APPLY](#)

Parameters	Description
WAN FailOver	WAN Check this box to enable Fail Over function.

WAN Priority	Please select the WAN connection priority from the drop-down menu.
Idle Timeout	Please input the idle time for detecting the Internet Detect (3): connection. If the major Internet connection is idle for this amount of time then the router will send a ping to the target IP Address you have assigned. If the ping gets a reply, the router will restart the idle timer, otherwise it will failover to the second priority of WAN connection.
Ping Target IP	Please input the target IP address you wish to ping out. If the major Internet connection is idle for too long the router will attempt to ping the target IP address.
E-Mail Notification	If you enable E-Mail Notification function, when the WAN connection fails the router will automatically attempt to connect to the second priority of WAN connection and mail a notification to you.
SMTP Server	Please input the SMTP Server you wish to use.
Mail Address From	Please input the mail address which you would like to use as an alarm.
Mail Address To	Please input the mail address which you would to advise.

5.2.2 Dynamic IP

If Dynamic IP is selected, your ISP will automatically give you an IP address. Some ISP's may also require that you fill in additional information such as Host Name, Domain Name and MAC address. Please refer to the section 4.2.1 for more settings of this option.

Dynamic IP 

The Host Name is optional, but may be required by some Service Providers. The default MAC Address is set to the WAN physical interface on the Broadband router. If required by your Service Provider, you can use the 'Clone MAC Address' button to copy the MAC Address of the Network Interface Card installed in your PC and replace the WAN MAC Address with this MAC Address.

Host Name :

MAC address :

5.2.3 Static IP

If Static IP is selected, your ISP should provide all the information required in this screen. Please refer to the section 4.2.2 for more settings of this option.

Static IP ?

If your Service Provider has assigned a Fixed IP address; enter the assigned IP Address, Subnet Mask and the Gateway IP Address provided.

IP address assigned by your Service Provider :	172.1.1.1
Subnet Mask :	255.255.0.0
Service Provider Gateway Address :	172.1.1.254

Apply Cancel

5.2.4 PPPoE

Select PPPoE if your ISP requires PPPoE protocol to connect to the Internet. Your ISP should provide all the information required in this section. Please refer to the section 4.2.3 to know the detail settings of this option.

PPPoE ?

Enter the PPPoE User Name and Password assigned by your Service Provider. The Service Name is normally optional, but may be required by some Service Providers. Enter a Idle Time (in minutes) to define a maximum period of time for which the Internet connection is maintained during inactivity. If the connection is inactive for longer than the Maximum Idle Time, then the connection will be dropped. You can enable the Connect on Demand option to automatically re-establish the connection as soon as you attempt to access the Internet again.
If your Internet Service Provider requires the use of PPPoE, enter the information below.

User Name :	<input type="text"/>
Password :	<input type="password"/>
Service Name :	<input type="text"/>
MTU :	1392 (512<=MTU Value<=1492)
Connection Type :	Continuous <input type="button" value="Connect"/> <input type="button" value="Disconnect"/>
Idle Time Out :	10 (1-1000minutes)

Apply Cancel

5.2.5 PPTP

Select PPTP if your ISP requires the PPTP protocol to connect to the Internet. Your ISP should provide all the information required in this section. Please refer to section 4.2.4 for more settings of this option.

PPTP ?

Point-to-Point Tunneling Protocol is a common connection method used in xDSL connections.

- **WAN Interface Settings**
 - Obtain an IP address automatically
 - Host Name :
 - MAC address :
 - Use the following IP address
 - IP address :
 - Subnet Mask :
 - Default Gateway :
- **PPTP Settings**
 - User ID :
 - Password :
 - PPTP Gateway :
 - Connection ID : (Optional)
 - MTU : (512<= MTU Value<=1492)
 - BEZEQ-ISRAEL : Enable (for BEZEQ network in ISRAEL use only)
 - Connection Type :
 - Idle Time Out : (1-1000minutes)

5.2.6 L2TP

Select L2TP if your ISP requires the L2TP protocol to connect to the Internet. Your ISP should provide all the information required in this section. Please refer to section 4.2.5 for more settings of this option.

L2TP ?

Layer Two Tunneling Protocol is a common connection method used in xDSL connections.

- **WAN Interface Settings**
 - Obtain an IP address automatically
 - Host Name :
 - MAC address :
 - Use the following IP address
 - IP address :
 - Subnet Mask :
 - Default Gateway :
- **L2TP Settings**
 - User ID :
 - Password :
 - L2TP Gateway :
 - MTU : (512<=MTU Value<=1492)
 - Connection Type :
 - Idle Time Out : (1-1000 minutes)

5.2.7 Telstra Big Pond

Select Telstra Big Pond if your ISP requires the Telstra Big Pond protocol to connect you to the Internet. Telstra Big Pond protocol is used by the ISP in Australia. Your ISP should provide all the information required in this section. Please refer to section 4.2.6 for more settings of this option.

Telstra Big Pond

If your Internet service is provided by Telstra Big Pond in Australia, you will need to enter your information below, This information is provided by Teistra BigPond.

User Name :

Password :

User decide login server manually

Login Server :

Apply Cancel

5.2.8 DNS

A Domain Name System (DNS) server is like an index of IP addresses and Web addresses. If you type a Web address into your browser, such as www.router.com, a DNS server will find that name in its index and the matching IP address. Most ISPs provide a DNS server for efficiency and convenience. If your Service Provider connects you to the Internet with dynamic IP settings, it is likely that the DNS server IP address is provided automatically. However, if there is a DNS server that you would rather to use, please specify the IP address of that DNS server here.

DNS

A DNS (Domain Name System) server is like an index of IP Addresses and Web Addresses. If you type a Web address into your browser, such as www.broadbandrouter.com, a DNS server will find that name in its index and find the matching IP address. Most ISPs provide a DNS server for speed and convenience. Since your Service Provider may connect you to the Internet through dynamic IP settings, it is likely that the DNS server IP Address is also provided dynamically. However, if there is a DNS server that you would rather use, you need to specify the IP Address of that DNS server. The primary DNS will be used for domain name access first, in case the primary DNS access failures, the secondary DNS will be used.

Primary DNS :

Secondary DNS :

APPLY CANCEL

Parameters	Description
DNS address	This is the ISP's DNS server IP address that they gave you; or you can specify your own preferred DNS server IP address.

Secondary DNS Address (optional)	This is optional. You can enter another DNS server's IP address as a backup. The secondary DNS will be used when the above primary DNS fails.
----------------------------------	---

After configuration complete, please click “Apply” button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press “Continue” for configure other settings or “Apply” to restart WNRT-625G with new configuration. You may refer to section 4.2.7 for the information of this screen.

5.2.9 DDNS

DDNS allows you to map the static domain name to a dynamic IP address. You must get an account, password and your static domain name from the DDNS service providers. This router supports DynDNS and TZO.

Parameters	Description
Dynamic DNS	Enable/Disable the DDNS function of this router.
Provider	Select a DDNS service provider. The default setting is “DynDNS”.
Domain name	Your static domain name that use DDNS.
Account / E-mail	The account that your DDNS service provider assigned to you.
Password / Key	The password you set for the DDNS service account above.

After configuration complete, please click “Apply” button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press “Continue” for configure other settings or “Apply” to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

5.3 LAN

The LAN Port screen below allows you to specify a private IP address for your router’s LAN interface.

The screenshot shows the 'LAN Settings' page of a Planet Internet Broadband Router. The page has a blue sidebar with navigation links: System, WAN, LAN (selected), Wireless, QoS, NAT, and Firewall. The main content area is titled 'LAN Settings' and includes a brief description of the DHCP server. Below this, there are three main sections: 'LAN IP' with fields for IP address (192.168.0.1) and Subnet Mask (255.255.255.0), and a dropdown for 802.1d Spanning Tree (Disabled); 'DHCP Server' with fields for Lease Time (Forever), Start IP (192.168.0.100), End IP (192.168.0.200), and Domain Name; and 'Static DHCP Leases Table' which allows for 16 static entries. At the bottom, there are buttons for 'Apply' and 'Cancel'.

Parameters	Description
LAN IP	Please input the IP address of this router.
IP Address	Designate the Access Point’s IP Address. This IP Address should be unique in your network. The default IP Address is 192.168.0.1 .
Subnet Mask	Specify a Subnet Mask for your LAN segment. The Subnet Mask of the Access Point is fixed and the value is 255.255.255.0 .
802.1d Spanning Tree	If it is enabled, this router will use the spanning tree protocol to prevent from network loop happened in the LAN ports.
DHCP Server	Enable or disable the DHCP Server.

DHCP Server	These settings are only available when 'DHCP Server' in 'LAN IP' section is 'Enabled'
Lease Time	The DHCP Server will temporarily assign IP addresses to LAN clients. In the Lease Time setting you can specify the time period that the DHCP Server lends an IP address to your LAN client. The DHCP Server will change your LAN client's IP address when this time threshold period is reached.
Start IP/End IP	You can designate a particular IP address range for your DHCP server to issue IP addresses to your LAN Clients. By default the IP range is from: Start IP 192.168.0.100 to End IP 192.168.0.200 .
Domain Name	You can specify the Domain Name for your Access Point.

Static DHCP Leases Table	This function allows you to assign a static IP address to a specific computer forever, so you don't have to set the IP address for a computer, and still enjoy the benefit of using DHCP server. Maximum 16 static IP addresses can be assigned here.
Enable Static DHCP Leases	Check this box to enable this function, otherwise uncheck it to disable this function.
MAC Address	Input the MAC address of the computer or network device (total 12 characters, with character from 0 to 9, and from a to f, like '001122aabbcc')
IP address	Input the IP address you want to assign to this computer or network device.
Add	After you inputted MAC address and IP address pair, click this button to add the pair to static DHCP leases table.
Clear	If you want to remove all characters you just entered, please click it.

Note:
After you clicked 'Add', the MAC address and IP address mapping will be added to 'Static DHCP Leases Table' section as below.

• **Static DHCP Leases Table**
It allows to entry 16 sets address only.

NO.	MAC address	IP address	Select
1	00:11:22:33:44:55	192.168.2.100	<input type="checkbox"/>

If you want to delete a specific item, please check the "Select" box of a MAC address and IP address mapping, then click "Delete Selected" button; if you want to delete all mappings, click "Delete All" button. If you want to deselect all mappings, click "Reset" button.

After configuration complete, please click "Apply" button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press "Continue" for configure other settings or "Apply" to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

5.4 Wireless

This screen allows you to Enable/Disable WNRT-625G wireless function.

Be noted:

Before switch the Radio from this page (Software option), please double check "Radio on/off" hardware button on back of the device has configured. The first priority is hardware button.

(When switch hardware button, it will disconnect and reconnect to turn on/off wireless signal. When switch Hardware button to Radio on, the software option can't apply to "Disable" option; When switch Hardware button to Radio off, the software option can't apply to "Enable" option.)

Wireless

The Wireless Router can be quickly configured as a wireless access point for roaming clients by setting the access identifier and channel number. It also supports data encryption and client filtering.
Before switch the Radio from this page (Software option), please double check "Radio on/off" hardware button has configured.

Wireless Module : Enable Disable

Parameters	Description
Enable/Disable	You can select to "Enable" or "Disable" the Wireless interface. After selected, please click "Apply" to make the settings effect.

After configuration complete, please click "Apply" button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press "Continue" for configure other settings or "Apply" to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

5.4.1 Basic Settings

In this page, allows you configure wireless information, the detail information please following below table.

Basic Settings ?

This page allows you to define ESSID, and Channel for the wireless connection. These parameters are used for the wireless stations to connect to the Access Point.

Band :	<input type="text" value="2.4 GHz (B+G+N)"/>
SSID :	<input type="text" value="625g"/>
Channel Number :	<input type="text" value="11"/>
Associated Clients :	<input type="button" value="Show Active Clients"/>

Band	<p>2.4GHz (B): It forces the WNRT-625 to operate in 802.11b only.</p> <p>2.4GHz (G): It forces the WNRT-625 to operate in 802.11g only.</p> <p>2.4GHz (N): It forces the WNRT-625 to operate in 802.11n only.</p> <p>2.4GHz (B+G): It allows the WNRT-625 to operate in 802.11b and 802.11g simultaneously.</p> <p>2.4GHz (B+G+N): It allows the WNRT-625 to operate in 802.11b, 802.11g, and 802.11n simultaneously.</p>										
SSID	<p>The ESSID (up to 32 printable ASCII characters) is the unique name identified in a WLAN. The ID prevents the unintentional merging of two co-located WLANs. Please make sure that the ESSID of all stations in the same WLAN network are the same. The default value is "default".</p>										
Channel Number	<p>Select the appropriate channel from the list provided to correspond with your network settings. Channels differ from country to country.</p> <p>Channel 1-11 (North America)</p>										
Associated Clients	<p>You may press "Show Active Clients" button to check the connected client information. After the button pressed, you will see the dialog box as below.</p> <div style="border: 1px solid #ccc; padding: 5px; margin: 5px 0;"> <p>Active Wireless Client Table</p> <p>This table shows the MAC address, transmission, reception packet counters for each associated wireless client.</p> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th>AID</th> <th>MAC Address</th> <th>802.11 PhyMode</th> <th>Power Saving</th> <th>Bandwidth</th> </tr> </thead> <tbody> <tr> <td>---</td> <td>---</td> <td>---</td> <td>---</td> <td>---</td> </tr> </tbody> </table> <div style="text-align: right; margin-top: 5px;"> <input type="button" value="Refresh"/> <input type="button" value="Close"/> </div> </div>	AID	MAC Address	802.11 PhyMode	Power Saving	Bandwidth	---	---	---	---	---
AID	MAC Address	802.11 PhyMode	Power Saving	Bandwidth							
---	---	---	---	---							

	You may press “ Refresh ” to get the new client table or “ Close ” to close this dialog box.
--	--

5.4.2 Advance Settings

You should not change the parameters in this screen unless you know what effect the changes will have on WNRT-625G. Please click “Apply” to save the settings when configuration finished.

Fragment Threshold :	<input type="text" value="2346"/>	(256-2346)
RTS Threshold :	<input type="text" value="2347"/>	(0-2347)
Beacon Interval :	<input type="text" value="100"/>	(20-1000 ms)
DTIM Period :	<input type="text" value="3"/>	(1-10)
Data Rate :	Auto <input type="button" value="v"/>	
N Data Rate :	Auto <input type="button" value="v"/>	
Channel Width :	<input checked="" type="radio"/> Auto 20/40 MHZ <input type="radio"/> 20 MHZ	
Preamble Type :	<input checked="" type="radio"/> Short Preamble <input type="radio"/> Long Preamble	
Broadcast Essid :	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
CTS Protect :	<input type="radio"/> Auto <input type="radio"/> Always <input checked="" type="radio"/> None	
Tx Power:	100 % <input type="button" value="v"/>	
WMM:	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
WatchDog:	<input type="checkbox"/> Enable	
	Watch Interval:	<input type="text" value="1"/> (1-60 minutes)
	Watch Host:	<input type="text" value="0.0.0.0"/>
Block Relay:	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	
Block Lan Access:	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	

Parameters	Description
Fragment Threshold	“Fragment Threshold” specifies the maximum size of packet during the fragmentation of data to be transmitted. If you set this value too low, it will result in bad performance.
RTS Threshold	When the packet size is smaller the RTS threshold, the access point will not use the RTS/CTS mechanism to send this packet.
Beacon Interval	The interval of time that this access point broadcast a beacon. Beacon is used to synchronize the wireless network.
DTIM Period	Set the DTIM period of wireless radio. Do not modify default value if you don't know what it is, default value is 3.

Data Rate	The Data Rate is the rate of data transmission for 802.11b/g clients. The WNRT-625G will use the highest possible selected transmission rate to transmit the data packets.
N Data Rate	Set the wireless data transfer rate to a certain value for 802.11n clients. Since most of wireless devices will negotiate with each other and pick a proper data transfer rate automatically. Please refer to “N Data Rate Table” as below.
Channel Width	Set channel width of wireless radio. Do not modify default value if you don't know what it is, default setting is 'Auto 20/40 MHz'.
Preamble Type	Preamble type defines the length of CRC block in the frames during the wireless communication. “ Short Preamble ” is suitable for high traffic wireless network. “ Long Preamble ” can provide more reliable communication.
Broadcast ESSID	If you enable “Broadcast ESSID”, every wireless station located within the coverage of this access point can discover this WNRT-625G easily. If you are building a public wireless network, enabling this feature is recommended. In private network, disabling “Broadcast ESSID” can provide better security.
CTS Protection	It is recommended to enable the protection mechanism. This mechanism can decrease the rate of data collision between 802.11b and 802.11g wireless stations. When the protection mode is enabled, the throughput of the AP will be a little lower due to many of frame traffic should be transmitted.
TX Power	Users can adjust the WNRT-625G output power to 100%, 90%, 75% 50% 25% and 10%. In default, WNRT-625G will work with 100% output power.
WMM	The short of Wi-Fi Multi-Media, it will enhance the data transfer performance of multimedia contents when they're being transferred over wireless network.
WatchDog	When you set the important Server in the same IP range topology , key the IP address in the Watch host space and set the time (1~60 minutes). When there is large traffic in the topology, you can not login the server during the setting time. The WNRT-625 will reboot to solve the traffic jam status.
Block Relay	When you enable the function, the WNRT-625 wireless users can not Access each other.

After configuration complete, please click “Apply” button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press “Continue” for configure other settings or “Apply” to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

N Data Rate Table

MCS Index	HT20	HT40
	Data rate (Mbps) @ 400ns GI	
0	7.2	15.0
1	14.4	30.0
2	21.7	45.0
3	28.9	60.0
4	43.3	90.0
5	57.8	120.0
6	65.0	135.0
7	72.2	150.0
8	14.444	30.0
9	28.889	60.0
10	43.333	90.0
11	57.778	120.0
12	86.667	180.0
13	115.556	240.0
14	130.000	270.0
15	144.444	300.0

5.4.3 Security

WNRT-625G provides complete wireless LAN security functions, includes WEP, WPA-pre share key (WPA-AES, WPA2-TKIP, WPA2 Mixed) and WPA RADIUS (WPA-AES, WPA2-TKIP, WPA2 Mixed). With these security functions, you can prevent your wireless LAN from illegal access. Please make sure your wireless stations use the same security function. In default, the security function is "Disable".

Security Settings

This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

Encryption :

Enable 802.1x Authentication

5.4.3.1 WEP

When you select 64-bit or 128-bit WEP key, you have to enter WEP keys to encrypt data. You can generate the key by yourself. You can enter four WEP keys and select one of them as default key. Then the access point will just allow the clients that with the same encryption keys connected. You can use WEP encryption in “AP mode”, “Station-Ad Hoc mode”, “Station-Infrastructure mode” and “AP Bridge-WDS mode”. If you would like to enable 802.1x Authentication also, please check the “Enable 802.1x Authentication” and refer to section 5.4.3.2 for the detail of 802.1x settings.


Parameter	Description
Encryption	Please select “WEP” in this option.
Key Length	You can select the 64 or 128-bit key to encrypt transmitted data. Larger WEP key length will provide higher level of security, but the throughput will be lower.
Key Format	You may select to select ASCII Characters (alphanumeric format) or Hexadecimal Digits (in the “A-F”, “a-f” and “0-9” range) to be the WEP Key.
Default Tx Key	Select one of the four keys to encrypt your data. Only the key you select it in the “Default key” will take effect.
Encryption Key 1 - Key 4	The WEP keys are used to encrypt data transmitted in the wireless network. Fill the text box by following the rules below. 64-bit WEP: input 10-digit Hex values (in the “A-F”, “a-f” and “0-9” range) or 5-digit ASCII character as the encryption keys. 128-bit WEP: input 26-digit Hex values (in the “A-F”, “a-f” and “0-9” range) or 10-digit ASCII characters as the encryption keys.

Enable 802.1x Authentication	Check this box and another sub-menu will appear if you want to enable 802.1X authentications with WEP encryption. You may refer to section 5.4.3.2 to enter the correct setting of the fields.
------------------------------	--

After configuration complete, please click “Apply” button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press “Continue” for configure other settings or “Apply” to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

5.4.3.2 802.1X

IEEE 802.1x is an authentication protocol. Every user must use a valid account to login to this Access Point before accessing the wireless LAN. The authentication is processed by a RADIUS server. This mode only authenticates user by IEEE 802.1x, but it does not encryption the data during communication. It is suggested to enable 802.1x and WEP at the same time.

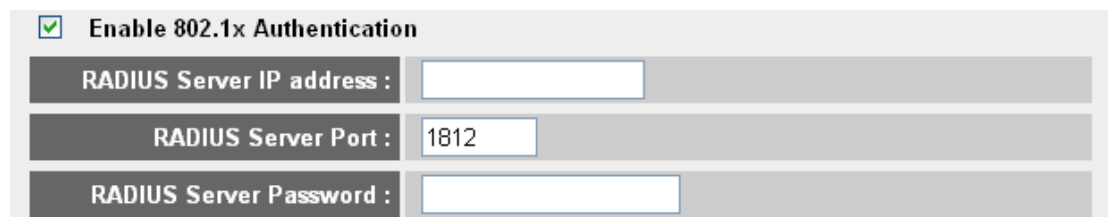

Parameter	Description
RADIUS Server IP address	Please input the IP address of radius server here.
RADIUS Server Port	Please input the port number of radius server here. Leave the default port setting or assign a new port number for this option.
RADIUS Server Password	Please input the port number of radius password here.

After configuration complete, please click “Apply” button to save the configuration. Then you will see a screen to prompt you the settings are save successfully. You may press “Continue” for configure other settings or “Apply” to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

5.4.3.3 WPA - PSK

Wi-Fi Protected Access (WPA) is an advanced security standard. You can use a pre-shared key to authenticate wireless stations and encrypt data during communication. It uses TKIP or CCMP (AES) to change the encryption key frequently. So the encryption key is not easy to be broken by hackers. This can improve security very much.

Security Settings

This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

Encryption :	WPA pre-shared key
WPA Unicast Cipher Suite :	<input checked="" type="radio"/> WPA(TKIP) <input type="radio"/> WPA2(AES) <input type="radio"/> WPA2 Mixed
Pre-shared Key Format :	Passphrase
Pre-shared Key :	<input type="text"/>

Parameter	Description
Encryption	Please select "WPA pre-shared key" in this option.
WPA Unicast Cipher Suite	WPA (TKIP) TKIP can change the encryption key frequently to enhance the wireless LAN security.
	WPA2 (AES) This use CCMP protocol to change encryption key frequently. AES can provide high-level encryption to enhance the wireless LAN security.
	WPA2 Mixed This will use TKIP or AES based on the other communication peer automatically.
Pre-shared Key Format	You may select to select Passphrase (alphanumeric format) or Hexadecimal Digits (in the "A-F", "a-f" and "0-9" range) to be the Pre-shared Key.
Pre-shared Key	<p>The Pre-shared key is used to authenticate and encrypt data transmitted in the wireless network. Fill the text box by following the rules below.</p> <p>Hex: input 64-digit Hex values (in the "A-F", "a-f" and "0-9" range) or at least 8 character pass phrase as the pre-shared keys.</p>

After configuration complete, please click "Apply" button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press "Continue" for configure other settings or "Apply" to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

5.4.3.4 WPA - RADIUS

You can use a RADIUS server to authenticate wireless stations and provide the session key to encrypt data during communication. It uses TKIP or CCMP (AES) to change the encryption key frequently.

Security Settings

This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

Encryption :	<input type="text" value="WPA_RADIUS"/>
WPA Unicast Cipher Suite :	<input checked="" type="radio"/> WPA(TKIP) <input type="radio"/> WPA2(AES) <input type="radio"/> WPA2 Mixed
RADIUS Server IP address :	<input type="text"/>
RADIUS Server Port :	<input type="text" value="1812"/>
RADIUS Server Password :	<input type="password"/>

Parameter		Description
Encryption		Please select "WPA RADIUS" in this option.
WPA Unicast Cipher Suite	WPA (TKIP)	TKIP can change the encryption key frequently to enhance the wireless LAN security.
	WPA2 (AES)	This use CCMP protocol to change encryption key frequently. AES can provide high-level encryption to enhance the wireless LAN security.
	WPA2 Mixed	This will use TKIP or AES based on the other communication peer automatically.
RADIUS Server IP Address		Enter RADIUS Serer IP address.
RADIUS Server Port		Leave the default port setting or assign a new port number for this option.
RADIUS Server Password		Please enter the password that is assigned in RADIUS Server.

After configuration complete, please click "Apply" button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press "Continue" for configure other settings or "Apply" to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

5.4.4 Access Control

WNRT-625G provides MAC Address Filtering, which prevents the unauthorized users from accessing your wireless network.

MAC Address Filtering

For security reason, the Access Point features MAC Address Filtering that only allows authorized MAC Addresses associating to the Access Point.

- MAC Address Filtering Table**
 It allows to entry 20 sets address only.

NO.	MAC address	Comment	Select
<input type="button" value="Delete Selected"/> <input type="button" value="Delete All"/> <input type="button" value="Reset"/>			

Enable Wireless Access Control

New	MAC address :	Comment:	<input type="button" value="Add"/>	<input type="button" value="Clear"/>
	<input style="width: 90%;" type="text"/>	<input style="width: 90%;" type="text"/>		

Parameters	Description
Enable Wireless Access Control	Enable or disable the MAC Address Filtering function.
Add MAC Address to the control table	In the bottom "New" area, fill in the "MAC Address" and "Comment" of the wireless station and then click "Add". Then this wireless station will be added into the "MAC Address Filtering Table" above.
Remove MAC address from the table	If you want to remove some MAC address from the "Current Access Control List", select the MAC addresses you want to remove in the list and then click "Delete Selected".
Delete All	If you want remove all MAC addresses from the list, just click this button.
Reset	Click "Reset" will clear your current selections.

After configuration complete, please click "Apply" button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press "Continue" for configure other settings or "Apply" to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

5.4.5 WPS

Wi-Fi Protected Setup (WPS) is the simplest way to build connection between wireless network clients and this wireless router. You don't have to select encryption mode and input a long encryption pass phrase every time when you need to setup a wireless client, you only have to press a button on wireless client and router, and the WPS will do the rest for you.

This wireless router supports two types of WPS: Push-Button Configuration (PBC), and PIN code. If you want to use PBC, you have to push a specific button on the wireless client to start WPS mode, and switch this wireless router to WPS mode too. You can push RET/WPS button of this wireless router, or click 'Start PBC' button in the web configuration interface to do this. If you want to use PIN code, you can see the setup as below.

WPS(Wi-Fi Protected Setup) Settings

This page allows you to change the setting for WPS(Wi-Fi Protected Setup).WPS can help your wireless client automatically connect to the Access Point.

Enable WPS

- **Wi-Fi Protected Setup Information**

WPS Status:	Configured
Self PinCode:	44898243
SSID	1111
Authentication Mode	WEP
Passphrase Key	*****

- **Device Configure**

Config Mode:	Registrar
Configure via Push Button:	<input type="button" value="Start PBC"/>
Configure via Client PinCode:	<input type="text"/> <input type="button" value="Start PIN"/>


Parameters	Description
Enable WPS	Check this box to enable WPS function, uncheck it to disable WPS.
Wi-Fi Protected Setup Information	WPS-related system information will be displayed here.
WPS Status	If the wireless security (encryption) function of this wireless router is properly set, you'll see 'Configured' message here. If wireless security function has not been set, you'll see 'unConfigured'.
Self PIN code	This is the WPS PIN code of this wireless router. This code is useful when WNRT-625G router sets as Enrollee, you need to fill this number into the web page of the other device.
SSID	The SSID of this wireless router will be displayed here.
Authentication Mode	The wireless security authentication mode of this wireless router will be displayed here.

Passphrase Key	Confirming your Identity Key Store Pass-phrase. It is allowed you to easily remember the key what you may want to remember is that if the passphrase is used,
----------------	---

Device Configure	
Config Mode:	“Registrar”, “Enrollee”, please see the setup step as below.
Configure via Push Button	Click ‘Start PBC’ to start Push-Button style WPS setup procedure. This wireless router will wait for WPS requests from wireless clients for 2 minutes. The ‘WLAN’ LED on the wireless router will be steady on when this wireless router is waiting for incoming WPS request.
Configure via PinCode	Please input the PIN code of the other device you wish to connect, and click ‘Start PIN’ button. The ‘WLAN’ led on the wireless router will be steady on when this wireless router is waiting for incoming WPS request.(please see the detail as below.)

PBC setup step:


1. Ensure you have set the security setting on WNRT-625G (as Registrar).
2. Click the WPS button on WNRT-625G (or the “Start PBC” button on the web interface of WNRT-625G) and the other device (supports PBC function) in 2 minutes.
3. WNRT-625G (Registrar) would send SSID and security key to the other device (Enrollee) through tunnel to connect.
4. If you see the wireless client in the list, WPS-PBC setting is successful.

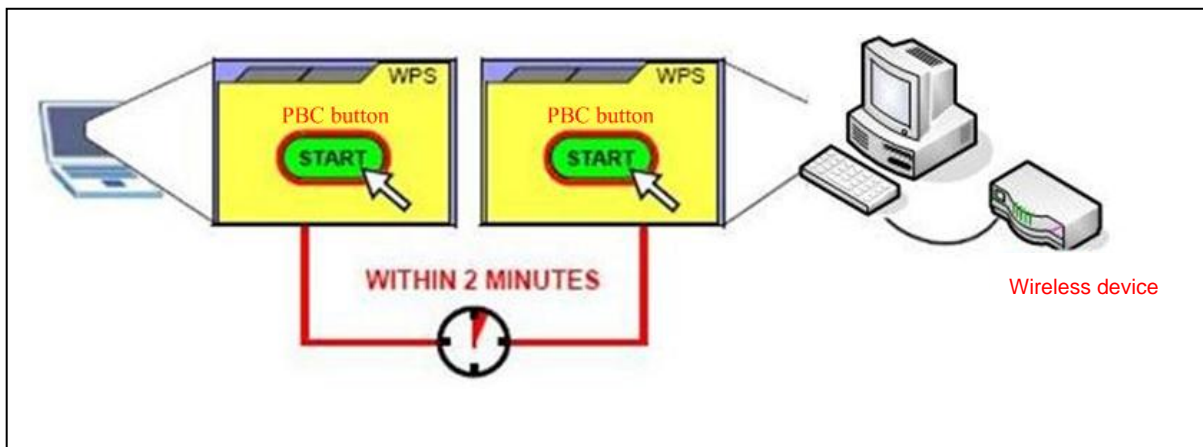

PIN (as Registrar) setup step:

1. Select Config Mode: “Registrar” on WNRT-625G.
2. Fill the PIN code of the other device (as Enrollee that support WPS-PIN setting) into the “configure via Client Pincode” of WNRT-625G.

3. Click the PIN buttons on WNRT-625G and the other device in 2 minutes.
4. If you see the wireless client in the list, WPS-PIN setting is successful.

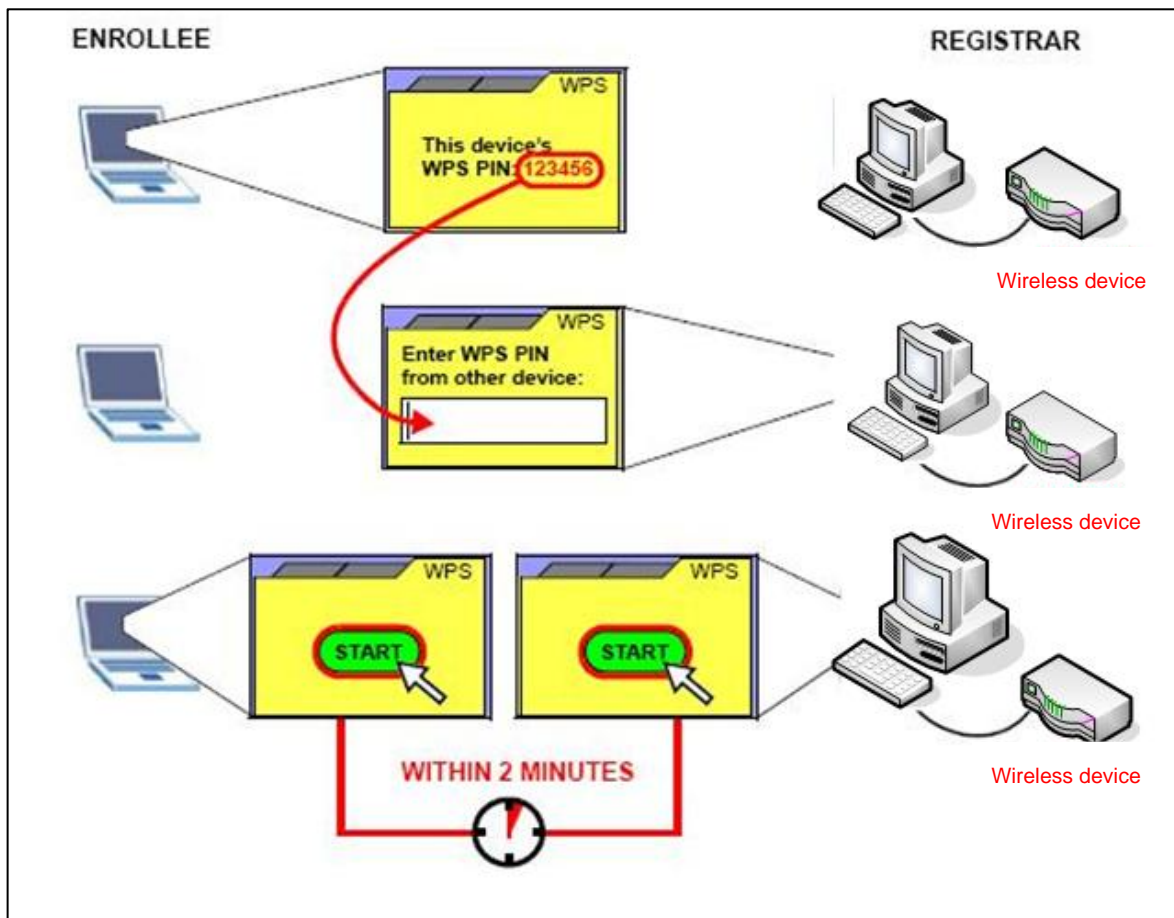

PIN (as Enrollee) setup step:

1. Select Config Mode: "Enrollee" on WNRT-625G.
2. Fill the PIN code of WNRT-625G into the other device (as Registrar).
3. Click the PIN buttons on WNRT-625G and the other device in 2 minutes.
4. If you see the wireless client in the list, WPS-PIN setting is successful.

**** As the figure as above, just change two roles.**

5.5 QoS

Quality of Service (QoS) refers to the capability of providing better service to selected network traffic. The primary goal of QoS is to provide priority including dedicated bandwidth, controlled jitter and latency (required by some real-time and interactive traffic), and improved loss characteristics. When using this feature, it is important to make sure the rules are not conflicted with each other.

- System
- WAN
- LAN
- Wireless
- **QoS**
- NAT
- Firewall

QoS

Quality of Service (QoS) refers to the capability of a network to provide better service to selected network traffic. The primary goal of QoS is to provide priority including dedicated bandwidth, controlled jitter and latency (required by some real-time and interactive traffic), and improved loss characteristics. Also important is making sure that providing priority for one or more flows does not make other flows fail.

Enable QoS

Total Download Bandwidth: >> kbits

Total Upload Bandwidth: >> kbits

Current QoS Table

Priority	Rule Name	Upload Bandwidth	Download Bandwidth	Select
----------	-----------	------------------	--------------------	--------

Parameters	Description
Enable QoS	Check this box to enable QoS function, unselect this box if you don't want to enforce QoS bandwidth limitations.
Total Download Bandwidth	You can set the limit of total download bandwidth in kbits. To disable download bandwidth limitation.
Total Upload Bandwidth	You can set the limit of total upload bandwidth in kbits. To disable upload bandwidth limitation.
Add	When you want to add a new QoS rule, press this button and refer to instructions below to add a new QoS rule.
Edit	When you want to edit the existing QoS rule, press this button and refer to instructions below to edit QoS rule.
Delete Selected	Select the QoS rule which you would like to delete, press this button to delete.
Delete All	When you want to delete all the QoS rules, you just need to press this button.
Move Up	Select a QoS rule and press this button to assign higher priority.
Remove Down	Select a QoS rule and press this button to assign lower priority.
Reset	Click "Reset" to clear your current selections.

After configuration complete, please click "Apply" button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press "Continue" for configure other settings or "Apply" to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

Add/Edit QoS Rule

You can assign packet classification criteria by its source IP range, destination IP range, traffic type, protocol, and source port range and destination port range parameters. The parameters that you leave as blank will be ignored. The priority of this rule will be applied to packets that match classification criteria of this rule. You can limit bandwidth consumed by packets that match this rule or guarantee bandwidth required by packets that match this rule.

After press Add or Edit button in QoS screen, you will see the web screen below for user to setup their QoS rule.

Parameters	Description
Rule Name	Please give a name to the QoS Rule
Bandwidth	You can limit the maximum bandwidth consumed by this rule by selecting "Maximum". You also can reserve enough bandwidth for this rule by selecting "Guarantee". The unit of bandwidth is Kbps. When we download data from Internet, the unit of download screen shows is KBps. 1KBps is equal to 8Kbps. When you enter the bandwidth, please make sure the number you enter is correct. For example, if you want to limit users download speed to 50KBps from Internet, you will need to enter 400Kbps in the configuration.
Local IP Address	Please enter the IP address of the local PC. If there is only one IP address you want to assign, please fill IP address in these two spaces.
Local Port Range	Please input the range of local (source) port number that will be affected by this rule. If you want to apply this rule on port 80 to 90, please input '80-90'; if you want to apply this rule on a single port, just input the port number, like '80'; if you want to apply this rule none assigned port, <u>must input the port number '1-65535'</u> .

Remote IP Address	Please enter the IP address of the PC from remote site. If you don't assign, please let it blank.
Remote Port Range	Please input the range of local (source) port number that will be affected by this rule. If you want to apply this rule on port 80 to 90, please input '80-90'; if you want to apply this rule on a single port, just input the port number, like '80'; if you want to apply this rule none assigned port, <u>must input the port number '1-65535'</u> .
Traffic Type	Select the traffic type of the packets that this rule will apply to. We list some popular applications here to ease the configuration. You also can get the same result by using other parameters, for example source or destination port number, if you are familiar with the application protocol.
Protocol	Please select the protocol TCP or UDP in the list.

After configuration complete, please click "Save" to save the settings. Or you may press "Reset" to clear the settings to enter again.

5.6 NAT

Network Address Translation (NAT) allows multiple users at your local site to access the Internet via a single legal IP Address. NAT provides Firewall protection from hacker attacks and has the flexibility to allow you to map Private IP Addresses to Public IP Addresses for key services such as Websites and FTP. If NAT is disabled, all LAN side workstations must have legal IP addresses for Internet access. If the router is used for routing application, not for Internet access, the NAT function can be disabled.

The screenshot shows the Planet Internet Broadband Router configuration interface. The top navigation bar includes 'Home | General Setup | Status | Tool'. The main title is 'Internet Broadband Router'. On the left, a sidebar menu lists various settings: System, WAN, LAN, Wireless, QoS, NAT (checked), Port Forwarding, Virtual Server, Special applications, UPnP Setting, ALG Settings, and Firewall. The main content area is titled 'NAT Settings' and contains the following text: 'Network Address Translation (NAT) allows multiple users at your local site to access the Internet through a single Public IP Address or multiple Public IP Addresses. NAT provides Firewall protection from hacker attacks and has the flexibility to allow you to map Private IP Addresses to Public IP Addresses for key services such as the Web or FTP.' Below this text is a control for 'Enable or disable NAT module function' with radio buttons for 'Enable' (selected) and 'Disable'. An 'Apply' button is located at the bottom right of the settings area.

Parameters	Description
Enable or Disable NAT module function	You can select to enable or disable the NAT function. If you choose the disable, the NAT sub-function will just let you to use the function of Static

	Routing setting as well as the fast NAT mode also cannot be used even it is in the status of enable. After selected, please click “Apply” to make the settings effect.
--	--

After configuration complete, please click “Apply” button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press “Continue” for configure other settings or “Apply” to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

5.6.1 Static Routing

After you disable NAT mode, you can enable Static Routing to turn off NAT function of this router and let this router forward packet by your routing policy.

Parameters	Description
Enable Static Routing	Check this box to enable Static Routing function, unselect this box if you don't want to turn off NAT function of this router.
Destination LAN IP	Type the Destination LAN IP address you use to access the Internet. Your ISP or network administrator provides you with this information.
Subnet Mask	Type the subnet mask for your network. If you do not type a value here, your ISP or network administrator provides you with this information.
Default Gateway	Type the gateway address of your network. Your ISP or network administrator provides you with this information.
Hop Count	Input which hop count you want to apply to this configuration.
Interface	Select the interface which you would like to use (LAN / WAN).
Add	Click to add a configuration to the Current Static Routing Table at the bottom of this page.

Reset	Click "Reset" will clear your current settings to allow you to enter again.
Current Static Routing Table	
Delete Selected	If you want to remove some Destination LAN IP address from the "Current Static Routing Table", select the Destination LAN IP addresses you want to remove in the table and then click "Delete Selected".
Delete All	If you want remove all Destination LAN IP addresses from the table, just click this button.
Reset	Click "Reset" will clear your current selections.

After configuration complete, please click "Apply" button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press "Continue" for configure other settings or "Apply" to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

5.6.2 Port Forwarding

The Port Forwarding allows you to re-direct a particular range of service port numbers (from the Internet/WAN Ports) to a particular LAN IP address. It helps you to host some servers behind the firewall.

Parameters	Description
Enable Port Forwarding	Enable Port Forwarding.
Private IP	This is the private IP of the server in LAN. Note: You need to give your LAN PC clients a fixed/static IP address for Port Forwarding to work properly.
Type	This is the protocol type to be forwarded. You can choose to forward "TCP"

	or "UDP" packets only or select "both" to forward both "TCP" and "UDP" packets.
Port Range	The range of ports to be forward to the private IP.
Comment	The description of this setting.
Add	Fill in the "Private IP", "Type", "Port Range" and "Comment" of the setting to be added and then click "Add". Then this Port Forwarding setting will be added into the "Current Port Forwarding Table" below. If you find any typo before adding it and want to retype again, just click "Clear" and the fields will be cleared.
Reset	Click "Reset" will clear your current settings to allows you to enter again.
Current Port Forwarding Table	
Delete Selected	If you want to remove some MAC address from the "Current Access Control List", select the MAC addresses you want to remove in the table and then click "Delete Selected".
Delete All	If you want remove all MAC addresses from the table, just click this button.
Reset	Click "Reset" will clear your current selections.

After configuration complete, please click "Apply" button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press "Continue" for configure other settings or "Apply" to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

5.6.3 Virtual Server

Use the Virtual Server function when you need to have different servers in your LAN to handle many services and Internet applications (e.g. Email, FTP, Web server etc.) to the Internet. Computers use numbers called port numbers to recognize a particular service/Internet application type. The Virtual Server allows you to re-direct a particular service port number (from the WAN Port) to a particular LAN private IP address as its service port number.

- System
- WAN
- LAN
- Wireless
- QoS
- **NAT**
 - ▶ Port Forwarding
 - ▶ **Virtual Server**
 - ▶ Special applications
 - ▶ UPnP Setting
 - ▶ ALG Settings
- Firewall

Virtual Server ?

You can configure the Broadband router as a Virtual Server so that remote users accessing services such as the Web or FTP at your local site via Public IP Addresses can be automatically redirected to local servers configured with Private IP Addresses. In other words, depending on the requested service (TCP/UDP) port number, the Broadband router redirects the external service request to the appropriate internal server (located at one of your LAN's Private IP Address).

 Enable Virtual Server

Private IP	Private Port	Type	Public Port	Comment
<input type="text"/>	<input type="text"/>	Both	<input type="text"/>	<input type="text"/>

Current Virtual Server Table

NO.	Private IP	Private Port	Type	Public Port	Comment	Select

Parameters	Description
Enable Virtual Server	Enable Virtual Server.
Private IP	This is the LAN client/host IP address that the Public Port number packet will be sent to. Note: You need to give your LAN PC clients a fixed/static IP address for Virtual Server to work properly.
Private Port	This is the port number (of the above Private IP host) that the below Public Port number will be changed to when the packet enters your LAN (to the LAN Server/Client IP).
Type	Select the port number protocol type (TCP , UDP or Both). If you are unsure, then leave it to the default both protocols.
Public Port	Enter the service (service/Internet application) port number from the Internet that will be re-directed to the above Private IP address host in your LAN. Note: Virtual Server function will have priority over the DMZ function if there is a conflict between the Virtual Server and the DMZ settings.
Add	Fill in the "Private IP", "Private Port", "Type", "Public Port" and "Comment" of the setting to be added and then click "Add". Then this Virtual Server setting will be added into the "Current Virtual Server Table" below. If you find any typo before adding it and want to retype again, just click "Clear" and the fields will be cleared.
Reset	Click "Reset" will clear your current settings to allows you to enter again.

Current Virtual Server Table	
Delete Selected	If you want to remove some items from the "Current Virtual Server Table", select the MAC addresses you want to remove in the table and then click "Delete Selected".
Delete All	If you want remove all items of the table, just click this button.
Reset	Click "Reset" will clear your current selections.

After configuration complete, please click "Apply" button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press "Continue" for configure other settings or "Apply" to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

5.6.4 Special Applications

Some applications require multiple connections, such as Internet games, video conferencing, Internet telephony and others. In this section you can configure the router to support multiple connections for these types of applications.

Special Applications

Some applications require multiple connections, such as Internet gaming, video conferencing, Internet telephony and others. These applications cannot work when Network Address Translation (NAT) is enabled. If you need to run applications that require multiple connections, specify the port normally associated with an application in the "Trigger Port" field, select the protocol type as TCP or UDP, then enter the public ports associated with the trigger port to open them for inbound traffic.
 Note: The range of the Trigger Port is 1 to 65535.

Enable

IP Address	TCP Port to Open	UDP Port to Open	Comment
0.0.0.0			

Popular Applications:

Current Trigger-Port Table

NO.	IP Address	TCP Port to Open	UDP Port to Open	Comment	Select

Parameters	Description
Enable	Enable the Special Application function.
IP Address	Type IP Address for the Popular Application. The computer with this IP address acts as a host IP with unlimited Internet access.
TCP Port to Open	Enter the In-coming (Inbound) port for this type of application (e.g. 2300-2400, 47624).
UDP Port to Open	Note: Individual port numbers are separated by a comma (e.g. 47624, 5775, and 6541 etc.).
Comment	The description of this setting.
Popular Applications	This section lists the more popular applications that require multiple connections. Select an application from the Popular Applications selection. Once you have selected an application, click the "Add" button in right side of this setting. This will automatically copy the Port Trigger information required for this popular application into the input fields.
Add	Add the settings into the "Current Trigger Port Table".
Reset	Click "Reset" will clear your current settings to allow you to enter again.

Current Trigger Port Table	
Delete Selected	If you want to remove some items from the "Current Trigger Port Table", select the MAC addresses you want to remove in the table and then click "Delete Selected".
Delete All	If you want to remove all items from the table, just click this button.
Reset	Click "Reset" will clear your current selections.

After configuration complete, please click "Apply" button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press "Continue" for configure other settings or "Apply" to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

Example: Special Applications

If you need to run applications that require multiple connections, specify the port (outbound) normally associated with that application in the "Trigger Port" field. Then select the protocol type (TCP or UDP) and enter the public ports associated with the trigger port to open them up for inbound traffic.

Example:

No.	IP Address	TCP Port to Open	UDP Port to Open	Comment
1	28800	1100-3400, 24689	2300-2400, 47624	MSN Game Zone
2	6112	5413	6112	Battle.net


In the example above, when a user trigger's port 28800 (outbound) for MSN Game Zone then the router will allow incoming packets for ports 2300-2400 and 47624 to be directed to that user.

Note: Only one LAN client can use a particular special application at a time.

5.6.5 UPnP

UPnP is more than just a simple extension of the Plug and Play peripheral model. It is designed to support zero-configuration, "invisible" networking, and automatic discovery for a breadth of device categories from a wide range of vendors.

With UPnP, a device can dynamically join a network, obtain an IP address, convey its capabilities, and learn about the presence and capabilities of other devices-all automatically; truly enabling zero configuration networks. Devices can subsequently communicate with each other directly; thereby further enabling peer to peer networking.

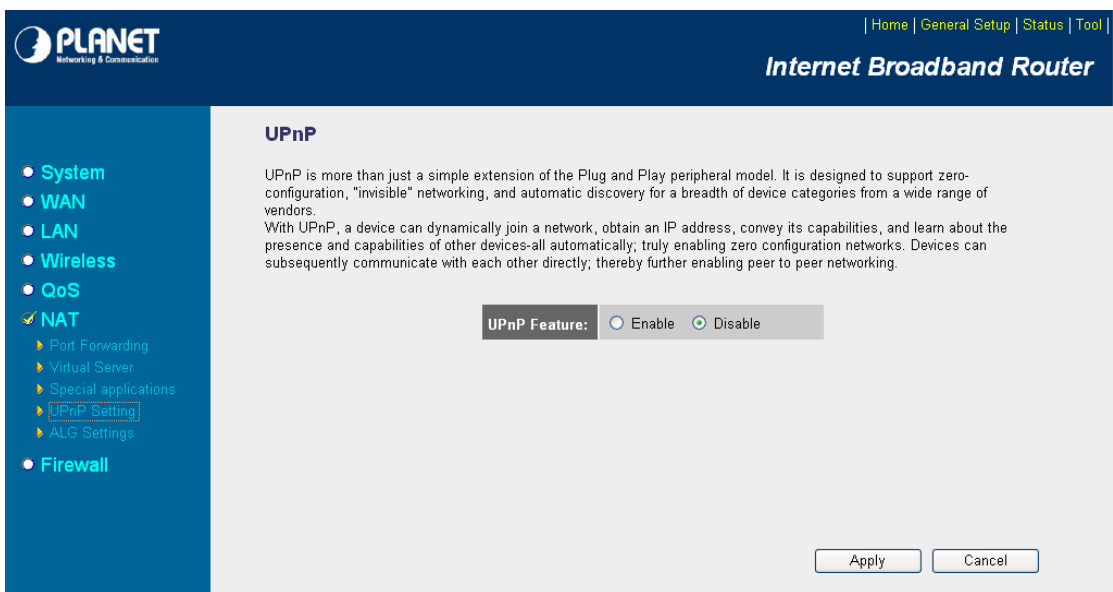

Parameters	Description
UPnP Feature	Enable or Disable UPnP function.

After configuration complete, please click “Apply” button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press “Continue” for configure other settings or “Apply” to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

5.6.6 ALG Settings

You can select applications that need “Application Layer Gateway” to support.

The screenshot shows the 'Application Layer Gateway' configuration page on a Planet Internet Broadband Router. The page title is 'Application Layer Gateway' with a help icon. Below the title, there is a text block: 'Below are applications that need router's special support to make them work under the NAT. You can select applications that you are using.' Below this is a table with three columns: 'Enable', 'Name', and 'Comment'. The table lists 13 applications, each with a checkbox in the 'Enable' column. At the bottom right of the table area, there are 'Apply' and 'Cancel' buttons.

Enable	Name	Comment
<input checked="" type="checkbox"/>	Amanda	Support for Amanda backup tool protocol.
<input checked="" type="checkbox"/>	Egg	Support for eggdrop bot networks.
<input checked="" type="checkbox"/>	FTP	Support for FTP.
<input checked="" type="checkbox"/>	H323	Support for H323/netmeeting.
<input checked="" type="checkbox"/>	IRC	Allows DCC to work though NAT and connection tracking.
<input checked="" type="checkbox"/>	MMS	Support for Microsoft Streaming Media Services protocol.
<input checked="" type="checkbox"/>	Quake3	Support for Quake III Arena connection tracking and nat.
<input checked="" type="checkbox"/>	Talk	Allows netfilter to track talk connections.
<input checked="" type="checkbox"/>	TFTP	Support for TFTP.
<input checked="" type="checkbox"/>	IPsec	Support for IPsec passthrough
<input type="checkbox"/>	Starcraft	Support for Starcraft/Battle.net game protocol.
<input type="checkbox"/>	MSN	Support for MSN file tranfer.

Parameters	Description
Enable	You can select to enable “Application Layer Gateway” of an application and then the router will let that application correctly pass though the NAT gateway.

After configuration complete, please click “Apply” button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press “Continue” for configure other settings or “Apply” to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

5.7 Firewall

WNRT-625G provides extensive firewall protection by restricting connection parameters, thus limiting the risk of hacker attack, and defending against a wide array of common Internet attacks. However, for applications that require unrestricted access to the Internet, you can configure a specific client/server in a Demilitarized Zone (DMZ).

PLANET Networking & Communication | Home | General Setup | Status | Tool | Internet Broadband Router

Security Settings (Firewall)

The Broadband router provides extensive firewall protection by restricting connection parameters, thus limiting the risk of hacker attack, and defending against a wide array of common attacks. However, for applications that require unrestricted access to the Internet, you can configure a specific client/server as a Demilitarized Zone (DMZ).

Enable or disable Firewall module function Enable Disable

Apply

Parameters	Description
Enable/Disable	You can select to enable or disable the firewall function. After selected, please click "Apply" to make the settings effect.

After configuration complete, please click "Apply" button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully.

5.7.1 Access Control

This screen allows you to restrict users from accessing certain Internet applications/services (e.g. Internet websites, email, FTP etc.). Network administrator can define the traffic type permitted in your LAN and control which PC client can have access to these services.

PLANET Networking & Communication | Home | General Setup | Status | Tool | Internet Broadband Router

Access Control

Access Control allows users to define the traffic type permitted or not permitted in your LAN. You can control which PC client uses what services in which they can have access to these services. If both of MAC filtering and IP filtering are enabled simultaneously, the MAC filtering table will be checked first and then IP filtering table.

Enable MAC Filtering Deny Allow

Client PC MAC address	Comment
<input type="text"/>	<input type="text"/>

Add Reset

MAC Filtering Table

NO.	Client PC MAC address	Comment	Select

Delete Selected Delete All Reset

Enable IP Filtering Table (up to 20 computers) Deny Allow

NO.	Client PC Description	Client PC IP address	Client Service	Protocol	Port Range	Select


Add PC Delete Selected Delete All

Apply Cancel

Parameters	Description
Enable MAC Filtering	Check "Enable MAC Filtering" to enable MAC Filtering. If select "Deny", all PCs will be allowed to access Internet except for the PCs in the list below. If select "Allow", all PCs will be denied to access Internet except for the PCs in the list below.
Add PC	Fill in "Client PC MAC Address" and "Comment" of the PC that is allowed to access the Internet, and then click "Add". If you find any typo before adding it and want to retype again, just click "Reset" and the fields will be cleared.
Remove PC	If you want to remove some PC from the "MAC Filtering Table", select the PC you want to remove in the table and then click "Delete Selected". If you want remove all PCs from the table, just click "Delete All" button. If you want to clear the selection and re-select again, just click "Reset".
Enable IP Filtering Table	Check "Enable IP Filtering Table" to enable IP filter. If select "Deny", all PCs will be allowed to access Internet except for the PCs in the list below. If select "Allow", all PCs will be denied to access Internet except for the PCs in the list below.
Add PC	You can click "Add PC" to add an access control rule for users by IP addresses.
Remove PC	If you want to remove some PCs from the "IP Filtering Table", select the PC you want to remove in the table and then click "Delete Selected".
Delete All	If you want to delete all PCs. Please click this button.

After configuration complete, please click "Apply" button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press "Continue" for configure other settings or "Apply" to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

Add PC


| Home | General Setup | Status | Tool

Internet Broadband Router

- System
- WAN
- LAN
- Wireless
- QoS
- NAT
- ✓ Firewall
 - ▶ Access Control
 - ▶ URL Blocking
 - ▶ DoS
 - ▶ DMZ

Access Control Add PC

This page allows users to define service limitation of client PC, including IP address and service type.

Client PC Description :

Client PC IP address : -

Client PC Service :

Service Name	Detail Description	Select
WWW	HTTP, TCP Port 80, 3128, 8000, 8080, 8081	<input type="checkbox"/>
E-mail Sending	SMTP, TCP Port 25	<input type="checkbox"/>
News Forums	NNTP, TCP Port 119	<input type="checkbox"/>
E-mail Receiving	POP3, TCP Port 110	<input type="checkbox"/>
Secure HTTP	HTTPS, TCP Port 443	<input type="checkbox"/>
File Transfer	FTP, TCP Port 21	<input type="checkbox"/>
MSN Messenger	TCP Port 1863	<input type="checkbox"/>
Telnet Service	TCP Port 23	<input type="checkbox"/>
AIM	AOL Instant Messenger, TCP Port 5190	<input type="checkbox"/>
NetMeeting	H.323, TCP Port 389,522,1503,1720,1731	<input type="checkbox"/>
DNS	UDP Port 53	<input type="checkbox"/>
SNMP	UDP Port 161, 162	<input type="checkbox"/>
VPN-PPTP	TCP Port 1723	<input type="checkbox"/>
VPN-L2TP	UDP Port 1701	<input type="checkbox"/>
TCP	All TCP Port	<input type="checkbox"/>
UDP	All UDP Port	<input type="checkbox"/>

User Define Service

Protocol:

Port Range:

Parameters	Description
Client PC Description	Please input any text to describe this IP address, up to 16 alphanumerical characters.
Client PC IP Addresses	Please input the starting IP address in the left field, and input the end IP address in the right field to define a range of IP addresses, or just input the IP address in the left field to define a single IP address. Note: You need to give your LAN PC clients a fixed/static IP address for the Access Control rule to work properly.
Client PC Service	You can block the clients from accessing some Internet services by checking the services you want to block.
Protocol	This allows you to select UDP , TCP or Both protocol types.
Port Range	You can assign up to five port ranges. The router will block clients from accessing Internet services that use these ports.
Add	Click "Add" to save the settings.
Reset	Click "Reset" to clear all fields.

After configuration complete, please click “Apply” button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press “Continue” for configure other settings or “Apply” to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

5.7.2 URL Blocking

You can block users to access to some web sites by entering a full URL address or just keyword of the web site.

URL Blocking ?

You can block access to certain Web sites from a particular PC by entering either a full URL address or just a keyword of the Web site.

Enable URL Blocking

URL/Keyword : http://

Current URL Blocking Table


NO.	URL/Keyword	Select

Parameters	Description
Enable URL Blocking	Enable/disable URL Blocking.
Add URL / Keyword	Fill in “URL / Keyword” and then click “Add”. You can enter the full URL address or the keyword of the web site you want to block. If you find any typo before adding it and want to retype again, just click "Reset" and the field will be cleared.
Remove URL / Keyword	If you want to remove some URL keyword from the "Current URL Blocking Table", select the URL keyword you want to remove in the table and then click "Delete Selected". If you want remove all URL keyword from the table, just click "Delete All" button. If you want to clear the selection and re-select again, just click “Reset”.

After configuration complete, please click “Apply” button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press “Continue” for configure other settings or “Apply” to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

5.7.3 DoS

WNRT-625G's firewall can block common hacker attacks, including Denial of Service, Ping of Death, Port Scan and Sync Flood. If Internet attacks occur, the router can log the events.

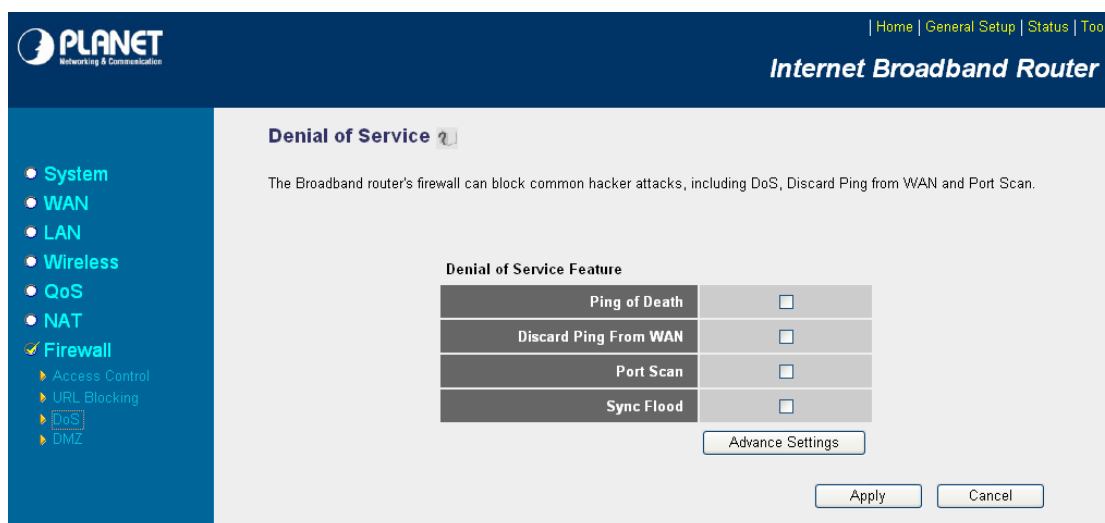

Parameters	Description
Ping of Death	Protections from Ping of Death attack.
Discard Ping From WAN	The router's WAN port will not respond to any Ping requests.
Port Scan	Protects the router from Port Scan.
Sync Flood	Protects the router from Sync Flood attack.
Advance Settings	If you want to configure the details of each setting above, click this button, and you will see the detail configure screen. Please make sure what the effect of the settings will affect before your adjustment.

After configuration complete, please click "Apply" button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press "Continue" for configure other settings or "Apply" to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

DoS - Advanced Settings

When you click 'Advanced' button in DoS menu, the following message will be displayed on your web browser:

Denial of Service Feature

<input type="checkbox"/> Ping of Death	<input style="width: 50px;" type="text" value="5"/> Packet(S) Per Second Burst <input style="width: 50px;" type="text" value="5"/>
<input type="checkbox"/> Discard Ping From WAN	
<input type="checkbox"/> Port Scan	<input checked="" type="checkbox"/> NMAP FIN / URG / PSH <input checked="" type="checkbox"/> Xmas tree <input checked="" type="checkbox"/> Another Xmas tree <input checked="" type="checkbox"/> Null scan <input checked="" type="checkbox"/> SYN / RST <input checked="" type="checkbox"/> SYN / FIN <input checked="" type="checkbox"/> SYN (only unreachable port)
<input type="checkbox"/> Sync Flood	<input style="width: 50px;" type="text" value="5"/> Packet(S) Per Second Burst <input style="width: 50px;" type="text" value="5"/>

Parameters	Description
Ping of Death	Set the threshold of when this DoS prevention mechanism will be activated. Please check the box of Ping of Death, and input the frequency of threshold (how many packets per second, minute, or hour), you can also input the 'Burst' value, which means when this number of 'Ping of Death' packet is received in very short time, this DoS prevention mechanism will be activated.
Discard Ping From WAN	Check the box to activate this DoS prevention mechanism.
Port Scan	Many kind of port scan methods are listed here, please check one or more DoS attack methods you want to prevent.
Sync Flood	Like Ping of Death, you can set the threshold of when this DoS prevention mechanism will be activated.

After configuration complete, please click "Apply" button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press "Continue" for configure other settings or "Apply" to go back to "Denial of Service Feature" configuration setting.

5.7.4 DMZ

If you have a local client PC that cannot run an Internet application (e.g. Games) properly from behind the NAT firewall, you can open the client up to unrestricted two-way Internet access by defining a DMZ Host. The DMZ function allows you to re-direct all packets from your WAN port IP address to a particular IP address in your LAN. The difference between the virtual server and the DMZ function is that the virtual server re-directs a particular service/Internet application (e.g. FTP, websites) to a particular LAN client/server, whereas DMZ re-directs all packets (regardless of services) to one particular LAN client/server.

DMZ(Demilitarized Zone)

If you have a local client PC that cannot run an Internet application properly from behind the NAT firewall, then you can open the client up to unrestricted two-way Internet access by defining a Virtual DMZ Host.

Enable DMZ

Public IP address	Client PC IP address
<input checked="" type="radio"/> Dynamic IP Session 1 <input type="radio"/> Static IP	<input type="text"/>

Current DMZ Table

NO.	Public IP address	Client PC IP address	Select
<input type="button" value="Delete Selected"/> <input type="button" value="Delete All"/> <input type="button" value="Reset"/>			

Parameters	Description
Enable DMZ	Enable/disable DMZ. Note: If there is a conflict between the Virtual Server and the DMZ setting, the Virtual Server function will have priority over the DMZ function.
Public IP Address	The IP address of the WAN port or any other Public IP addresses given to you by your ISP.
Client PC IP Address	Input the IP address of a particular host in your LAN that will receive all the packets originally going to the WAN port/Public IP address above. Note: You need to give your LAN PC clients a fixed/static IP address for DMZ to work properly.

After configuration complete, please click “Apply” button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press “Continue” for configure other settings or “Apply” to restart WNRT-625G with new configuration. Please refer to section 4.2.7 for more information about this screen.

Chapter 6 Status

The Status screen allows you to monitor the current status of your router. You can use the Status page to monitor the connection status of WAN and LAN interfaces, the current firmware and hardware version numbers, any illegal attempts to access your network, and information on all DHCP client PCs currently connected to your network.

The screenshot shows the PLANET Internet Broadband Router web interface. The top navigation bar includes 'Home', 'General Setup', 'Status', and 'Tool'. The page title is 'Internet Broadband Router'. On the left, a sidebar menu shows 'Status' selected, with sub-items: 'Internet Connection', 'Device Status', 'System Log', 'Security Log', 'Active DHCP Client', and 'Statistics'. The main content area is titled 'Status and Information' and contains a descriptive paragraph and a 'System' table.

System	
Model	Wireless Router
Up time	0day:0h:57m:59s
Hardware Version	Rev. A
Boot Code Version	1.0
Runtime Code Version	1.04

6.1 Internet Connection

View WNRT-625G's current Internet connection status and other related information.

The screenshot shows the PLANET Internet Broadband Router web interface for the 'Internet Connection' page. The top navigation bar includes 'Home', 'General Setup', 'Status', and 'Tool'. The page title is 'Internet Broadband Router'. On the left, a sidebar menu shows 'Status' selected, with sub-items: 'Internet Connection', 'Device Status', 'System Log', 'Security Log', 'Active DHCP Client', and 'Statistics'. The main content area is titled 'Internet Connection' and contains a descriptive paragraph and a table of connection details.

Attain IP Protocol :	Fixed IP connect
IP Address :	210.66.155.72
Subnet Mask :	255.255.255.224
Default Gateway :	210.66.155.94
MAC Address :	00.30.4F.44.82.61
Primary DNS :	168.95.1.1
Secondary DNS :	168.95.192.1

6.2 Device Status

View WNRT-625G's current configuration settings. The Device Status displays the configuration settings of WLAN and LAN.

The screenshot shows the 'Device Status' page of a Planet Internet Broadband Router. The page is divided into two main sections: 'Wireless Configuration' and 'LAN Configuration'. The 'Wireless Configuration' section includes fields for Mode (AP Bridge-WDS), ESSID (default), Channel Number (11), and Security (WEP). The 'LAN Configuration' section includes fields for IP Address (192.168.0.1), Subnet Mask (255.255.255.0), DHCP Server (Enable), and MAC Address (00:30:4F:28:60:10). A sidebar on the left contains navigation links for Status, Internet Connection, Device Status, System Log, Security Log, Active DHCP Client, and Statistics. The current time is displayed as 1/1/2000 2:02:19.

Wireless Configuration	
Mode	AP Bridge-WDS
ESSID	default
Channel Number	11
Security	WEP

LAN Configuration	
IP Address	192.168.0.1
Subnet Mask	255.255.255.0
DHCP Server	Enable
MAC Address	00:30:4F:28:60:10

6.3 System Log

This screen will show you the real-time information of WNRT-625G.

The screenshot shows the 'System Log' page of a Planet Internet Broadband Router. The page displays a list of system operation information, including start-up time, connection process, and error messages. The log entries are as follows:

```

Jan 1 00:00:00 (none) syslog.info syslogd started: BusyBox v1.00-pre2 (200
Jan 1 00:00:10 (none) local0.info udhcpd[426]: udhcpd (v0.9.9-pre) started
Jan 1 00:00:10 (none) local0.err udhcpd[426]: max_leases value (254) not s
Jan 1 00:00:15 (none) user.info udhcpd: udhcp client (v0.9.9-pre) started
Jan 1 01:01:05 (none) local0.info udhcpd[428]: sending OFFER of 192.168.0.
Jan 1 01:01:05 (none) local0.info udhcpd[428]: sending ACK to 192.168.0.10
Jan 1 01:53:57 (none) user.info udhcpd: Received SIGTERM
Jan 1 01:54:07 (none) local0.info udhcpd[613]: udhcpd (v0.9.9-pre) started
Jan 1 01:54:07 (none) local0.err udhcpd[613]: max_leases value (254) not s
  
```

At the bottom of the page, there are three buttons: Save, Clear, and Refresh.

Parameters	Description
System Log	This page shows the current system log of WNRT-625G. It displays the working information about WNRT-625G. About the bottoms of the page, the system log can be saved to a local file by

	<p>press “Save” button. If there is too much message in this screen, please press “Clear” button to clear the system log. It can be refreshed to get the most updated situation by press “Refresh” button. When the system is powered down, the system log will be cleared.</p>
--	---

6.4 Security Log

View any attempts that have been made to illegally gain access to your network.

Parameters	Description
Security Log	<p>This page shows the current security log of WNRT-625G. It displays any illegal attempts to access your network.</p> <p>About the bottoms of the page, the security log can be saved to a local file by press “Save” button. If there is too much message in this screen, please press “Clear” button to clear the system log. It can be refreshed to get the most updated situation by press “Refresh” button. When the system is powered down, the security log will be cleared.</p>

6.5 Active DHCP Client

View your client's information that is currently linked to WNRT-625G's DHCP server.

Parameters	Description
DHCP Client Table	This page shows all the DHCP clients currently connected to your network. The "Active DHCP Client Table" displays the IP address and the MAC address and Time Expired of each Client. Use the Refresh button to get the most updated situation.


6.6 Statistics

View the statistics of packets sent and received on WLAN, LAN and WAN.

Parameters	Description
Statistics	Shows the counters of packets sent and received on WLAN, LAN and WAN.


Chapter 7 Tools

This page includes the basic configuration tools, such as Configuration Tools (save or restore configuration settings), Firmware Upgrade (upgrade system firmware) and Reset.

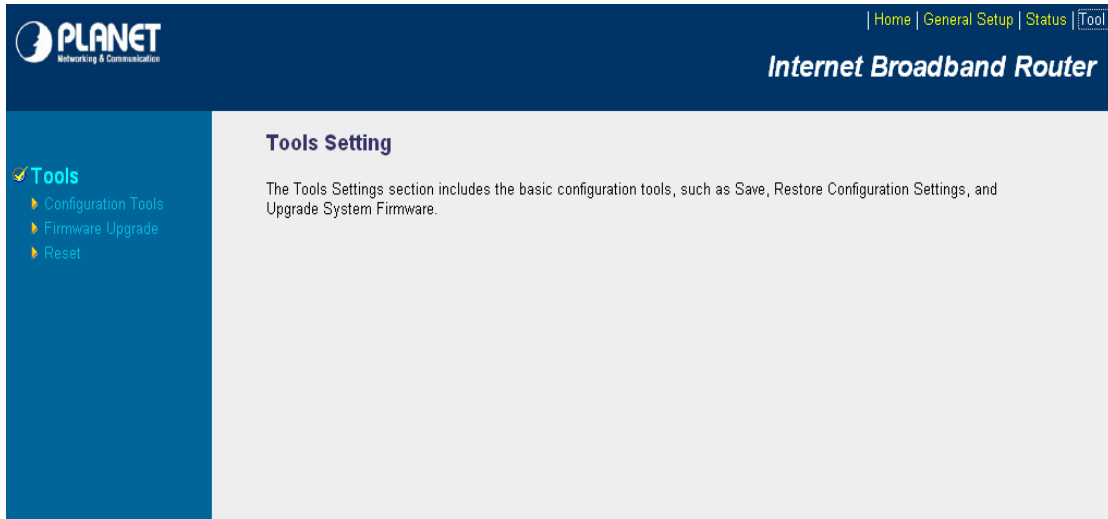

7.1 Configuration Tools

The Configuration Tools screen allows you to “Backup” the router’s current configuration setting. Saving the configuration settings provides an added protection and convenience when problems occur and you have to reset to factory default. With the saved file, you can re-load the saved configuration into the router through the “Restore” function. If extreme problems occur you can use the “Restore to Factory Defaults” selection, this will set all configurations to its original default settings.

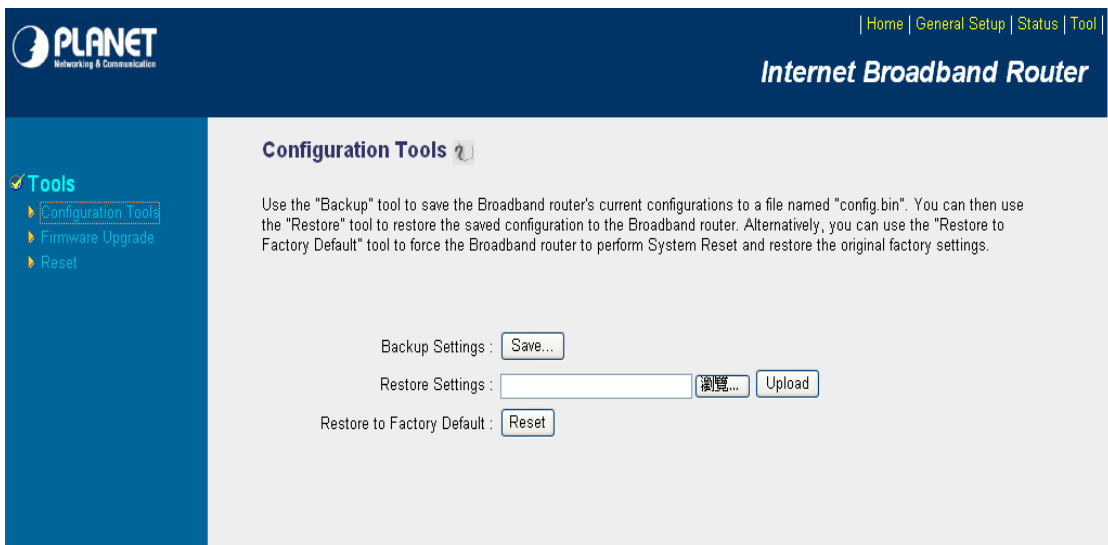

Parameters	Description
Configuration Tools	Use the " Backup " tool to save WNRT-625G current configuration to a file named "config.cfg" in your PC. You can then use the " Restore " tool to restore the saved configuration to WNRT-625G. The " Restore to Factory Defaults " tool can force WNRT-625G to perform a power reset for restore it to original factory settings.

After configuration complete, please click "Apply" button to save the configuration. Then you will see a screen to prompt you the settings are saving successfully. You may press "Continue" for configure other settings or "Apply" to restart WNRT-625G with new configuration.

7.2 Firmware Upgrade


This page prompt you it allows you to upgrade the router's firmware. Please press "Next" to continue.

Parameters	Description
Firmware Upgrade	This tool allows you to upgrade WNRT-625G's system firmware. To upgrade the firmware of your Broadband router, you need to download the firmware file to your local hard disk, and enter that file name and path in the appropriate field on this page. You can also press the "Browse..." button to find out the firmware file on your PC.

Once you've selected the new firmware file, click "Apply" button to start the upgrade process. (You may have to wait a few minutes for the upgrade to complete and WNRT-625G restart). After the WNRT-625G restart, you can start using the router.

7.3 Reset

You can reset the router's system should any problem exist. The reset function is essentially Re-boot your router.

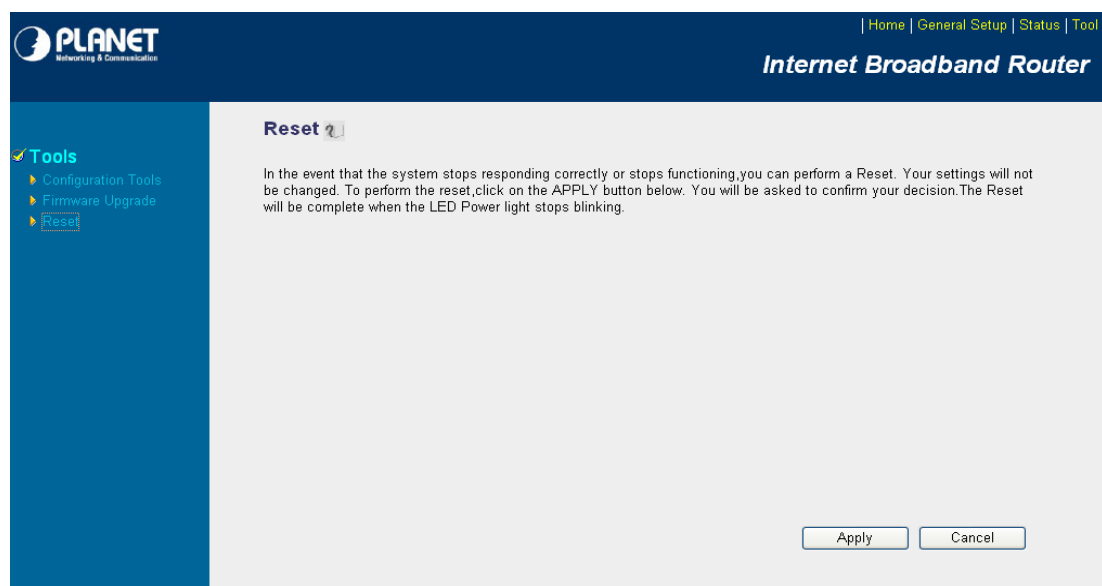

Parameters	Description
Reset	In the event that the system stops responding correctly or in some way stops functioning, you can perform a reset. Your settings will not be changed. To perform the reset, click on the "Apply" button. You will be asked to confirm your decision. The reset will be complete when the power light stops blinking. Once the reset process is complete you may start using the router again.

After configuration complete, please click "Apply" button, please wait for a while for the WNRT-625G restart.

Chapter 8 Troubleshooting

If you found WNRT-625G is working improperly or stop responding to you, please kindly read this troubleshooting first. Some problems can be solved by you within very short time! Please contact with your local dealer if below methods are failed.

● Router is not responding to me when I want to access it by web browser.

1. Please check the connection of power cord and network cable of this router. All cords and cables should be correctly and firmly inserted to the router.
2. If all LEDs on this router are off, please check the status of A/C power adapter, and make sure it's correctly powered.
3. You must use the same IP address section which router uses.
4. Are you using MAC or IP address filter? Try to connect the router by another computer and see if it works; if not, please restore your router to factory default settings (pressing 'reset' button for over 10 seconds).
5. Set your computer to obtain an IP address automatically (DHCP), and see if your computer can get an IP address.
6. If you did a firmware upgrade and this happens, contact your dealer of purchase for help.

● Why I can't get connected to Internet?

1. Call your Internet service provide and check if there's something wrong with their service.
2. If you just can't connect to one or more website, but you can still use other internet services, please check URL/Keyword filter.
3. Try to reset the router and try again later.
4. Reset the device provided by your Internet service provider too.
5. Try to use IP address instead of hostname. If you can use IP address to communicate with a remote server, but can't use hostname, please check DNS setting.

● Why I can't locate my router by my wireless client?

1. 'Broadcast ESSID' set to off?
2. All two antennas are properly secured.
3. Are you too far from your router? Try to get closer.
4. Please remember that you have to input ESSID on your wireless client manually, if ESSID broadcast is disabled.

● File download is very slow or breaks frequently

1. Are you using QoS function? Try to disable it and try again.
2. Internet is slow sometimes, being patient.
3. Try to reset the router and see if it's better after that.

4. Try to know what computers do on your local network. If someone's transferring big files, other people will think Internet is really slow.
5. If this never happens before, call you Internet service provider to know if there is something wrong with their network.

● **I can't log onto web management interface: password is wrong**

1. Make sure you're connecting to the correct IP address of the router!
2. Password is case-sensitive. Make sure the 'Caps Lock' light is not illuminated.
3. If you really forget the password, do a hard reset.

● **Router become hot**

1. This is not a malfunction if you can keep your hand on the router's case.
2. If you smell something wrong or see the smoke coming out from router or A/C power adapter, please disconnect the router and A/C power adapter from utility power (make sure it's safe before you're doing this!), and call your dealer of purchase for help.

● **The date and time of all event logs are wrong**

1. Adjust the internal clock of router.

EC Declaration of Conformity

For the following equipment:

*Type of Product: 802.11n 3G Broadband Router
*Model Number: WNRT-625G

* Produced by:

Manufacturer's Name : **Planet Technology Corp.**
Manufacturer's Address: 11F, No 96, Min Chuan Road
Hsin Tien, Taipei, Taiwan, R.O.C.

is herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to 1999/5/EC R&TTE.

For the evaluation regarding the R&TTE the following standards were applied:

EN 300 328 V1.7.1	(2006-05)
EN 301 489-1 V1.8.1	(2008-04)
EN 301 489-17 V1.3.2	(2008-04)
EN 50385	(2002)
EN 60950-1	(2006)
IEC 60950-1	(2005: 2nd Edition)

Responsible for marking this declaration if the:

Manufacturer Authorized representative established within the EU

Authorized representative established within the EU (if applicable):

Company Name: Planet Technology Corp.

Company Address: 11F, No.96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C

Person responsible for making this declaration

Name, Surname Tom Shih

Position / Title : Product Manager

Taiwan
Place

15th April, 2009
Date



Legal Signature

PLANET TECHNOLOGY CORPORATION